

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price	
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL		
5088	Magneto Assembly (Wico Model 1883)	x												29.90
5090	Bearing—Lower Main (For Motor Series A-4)	x												1.30
5092	Rivet	x	x	x										.02
5093	Spray Shield (Includes 4-5092)	x												.90
5099	Shut Off Cock	x												1.65
5101	Choke Control Assembly	x												.92
5102	Choke Stem and Pin	x												.40
5104	Spark Plug and Washer (Refer to 100-s-4)	x							x	x				
5105	Magneto Assembly (FW-2142)	x												29.90
5401	Powerhead (Refer to 5405)	x												
5402	Powerhead—Less Carburetor and Magneto (Refer to 5406)	x												
5403	Cylinder Block and Crankcase Assembly	x												29.00
5404	Lower Unit Assembly (Refer to 15145)	x	x	x										
5405	Powerhead Assembly	x												107.00
5406	Powerhead—Less Carburetor and Magneto	x												71.50
5831	Washer—Shut Off Cock	x	x	x	x	x	x		x	x				.01
5832	Metal Spacer	x	x		x	x								.01
15000	Tank Mounting Bracket—Rear	x	x	x										1.00
15001	Cover—Cylinder Head		x	x										.70
15002	Gasket—Cylinder Head Cover		x	x										.05
15003	Cylinder Head		x	x										3.75
15004	Gasket—Cylinder Head Compression		x	x										.08
15005	Gasket—Cylinder Head Water		x	x										.14
15011	Piston Ring	x	x	x										.40
15012	Lockspring Wristpin	x	x	x										.02
15014	Connecting Rod and Cap Assembly	x	x	x										4.30
15018	Crankshaft		x	x										21.00
15019	Magneto "Wico" (FW-1741B)		x											40.25
15020	Bearing—Upper Main (Refer to 15182)	x	x	x										
15021	Bearing—Lower Main (Refer to 15181)		x	x										
15024	Gasket—Intake Manifold		x	x										.02
15026	Carburetor Assembly (MD 8A)		x											12.65
15027	Speed Control Lever	x	x	x										.25
15028	Valve Assembly (Refer to 15223)	x	x											
15031	Tank Mounting Bracket—Side	x	x											.15
15032	Gasket—Exhaust Port Cover Plate		x											.10
15033	Plate—Exhaust Port Cover		x	x										.55
15034	Gasket—Exhaust Port Cover		x											.10
15035	Cover—Exhaust Port		x											1.35
15036	Gasket—Intake Port Cover	x	x	x										.02
15037	Cover—Intake Port	x	x	x										.10
15038	Stern Bracket Clamping—Left	x	x	x										4.10
15039	Stern Bracket Clamping—Right	x	x	x										4.10
15040	Stern Bracket—Left	x	x	x										3.10
15041	Stern Bracket—Right	x	x	x										3.10
15045	Swivel Bracket	x	x	x										1.80
15046	Swivel Bearing	x	x	x										.10
15047	Motor Support Tube Casing—Front (Available Only as Assembly—Refer to 15247)	x	x											
15048	Motor Support Tube Casing—Rear (Available Only as Assembly—Refer to 15247)	x	x											
15049	Stern Adjusting Screw and Handle	x	x	x										1.50
15051	Pin—Stern Adjusting Anchor	x	x	x										.44
15052	Clevis Pin—Stern Bracket	x	x	x										.44
15053	Pin—Tilting Lever	x	x	x										.10
15054	Spacer—Tilting Lever	x	x	x										.10
15055	Tilt Adjusting Lever	x	x	x										.15
15056	Thrust Socket	x	x	x										1.15
15058	Motor Support Tube Assembly (Refer to 15231)	x	x	x										

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL	
15066	Propeller Shaft	x	x	x									1.80
15067	Pin—Gear and Shaft	x	x	x									.05
15068	Snap Ring—Bevel Gear	x	x	x									.01
15069	Bevel Gear (13-20 Ratio)	x	x	x									4.50
15070	Gasket—Propeller Shaft Bearing Housing	x	x	x									.03
15072	Pump Plate	x	x	x									.20
15073	Pump Rotor	x	x	x									.50
15074	Pump Eccentric	x	x	x									1.20
15075	Water Pump Housing Assembly	x	x	x									1.96
15077	Propeller (Refer to 15206)		x	x									
15078	Friction Clutch	x	x	x									1.20
15084	Gas Tank Assembly (Black) (Prior to '49 Model)		x										17.00
15086	Shroud—Rear		x										3.80
15091	Oil Seal—Crankshaft—Upper	x	x	x									.75
15092	Shut Off Cock	x	x										1.65
15093	Cam Follower Pin	x	x	x	x								.15
15095	Gasket—Motor Support Tube	x	x	x									.10
15096	Gasket—Grease Vent	x	x	x									.01
15098	Bracket—Steering Handle (Refer to 15208)	x	x										
15099	Compression Block—Handle Bracket	x	x	x									.05
15100	Grommet—Handle Bracket	x	x	x									.05
15101	Stud—Handle Bracket	x	x	x									.10
15102	Stabilizer Friction Ring	x	x	x									.20
15103	Piston and Wristpin Assembly	x	x	x									4.60
15103A	Piston and Wristpin Assembly—.0015 Oversize	x	x	x									4.60
15103B	Piston and Wristpin Assembly—.003 Oversize	x	x	x									4.60
15105	Bolt—Tilting Pivot	x	x	x									.15
15106	Washer—Tilting Friction	x	x	x									.03
15109	Cam—Carburetor Control		x		x								.20
15111	Decal—Martin "40"		x										.10
15114	Linkage Lever		x		x								.40
15118	Rod—Linkage Control		x		x								.05
15119	Gear Case and Seal Assembly	x	x	x									8.90
15120	Intake Manifold		x										1.40
15121	Shroud Assembly—Front		x										4.00
15127	Gear Set (13-19 Ratio) (Refer to 15267)	x	x										
15128	Gear Set (13-20 Ratio)	x	x	x									7.50
15134A	Gasket Set		x										.76
15134B	Powerhead Gasket Set		x										.61
15135A	Decal Set (Prior to '49 Model)		x										.30
15135B	Decal Set ('49 Model or Later)		x										.30
15136	Friction Clutch (Refer to 15078)	x	x	x									
15137	Cylinder Block and Crankcase Assembly (Refer to 15191)		x										
15138	Piston and Wristpin Assembly (Refer to 15103)	x	x	x									
15142	Powerhead Assembly (Refer to 15400)		x										
15142A	Powerhead—Less Carburetor and Magneto (Refer to 15401)		x										
15143	Gas Line Assembly		x										.96
15145	Lower Unit Assembly	x	x	x									46.50
15146	Gear Case Assembly	x	x	x									23.50
15147	Stern Bracket Assembly	x	x	x									21.50
15148	Propeller Shaft Bearing Housing and Seal	x	x	x									2.90
15150	Gas Tank Gasket—Lower	x	x										1.30
15151	Gas Tank Gasket—Upper	x	x										.70
15152	Clip—Magneto Wire	x	x	x	x	x	x	x	x				.02
15154	Washer—Gear Case Mounting Screw	x	x	x									.05
15155	Water Pump Housing—Flushing Kit	x	x	x									1.96
15156	Flushing Kit Assembly	x	x	x									2.50
15159	Connecting Rod Screw	x	x	x									.15

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL	
15160	Decal—Instructions Operation		x										.10
15161	Set Screw—Stern Bracket	x	x	x									.10
15164	Swivel Retaining Screw	x	x	x									.08
15173	Lower Bearing Seat Casting (Refer to 25904)	x	x	x	x	x	x						
15176	Carburetor (MD 8B)		x										12.65
15181	Lower Main Bearing		x	x									1.30
15182	Upper Main Bearing	x	x	x									1.35
15185	Stabilizer Friction Washer (No Longer Used)	x	x										
15186	Carburetor and Choke Assembly (MD 8B)		x										13.75
15188	Decal—Rear	x	x		x								.10
15189	Decal—Speed Control (Refer to 25255)	x	x	x	x	x	x						
15190	Decal—Operating Instructions (Refer to 15160)		x										
15191	Cylinder Block and Crankcase Assembly		x										30.00
15195	Rear Shroud and Spray Shield Assembly		x	x									4.90
15198	Gas Tank Assembly (Grey) ('49 Model and Later)		x										17.00
15206	Propeller		x	x									2.95
15208	Bracket—Steering Handle	x	x	x									1.80
15211	Water Outlet Deflector		x										.10
15212	Decal—Carburetor		x		x	x							.10
15213	Shroud Assembly—Front		x										4.00
15214	Gasket—Idle Adjusting Screw Opening	x	x										.01
15223	Valve Assembly	x	x										.80
15224	Kit—Choke and Prime Assembly		x		x								4.25
15226	Tapered Dowel Pin Screw	x	x	x	x	x	x						.10
15227	Gasket—Vent Screw	x	x	x									.01
15231	Motor Support Tube Assembly	x	x	x									14.20
15234	Splash Shield		x	x									.88
15237	Lower Unit Stud	x	x	x									.54
15240	Set Screw—Cam Follower (Refer to 9-s-6)	x	x		x								
15247	Motor Support Tube Casing—Front and Rear	x	x	x									8.00
15252	Tank Mounting Bracket—Side		x										.35
15254	Water Pump Seal	x	x	x									.05
15256	Carter Carburetor (N-752-SA)			x									10.80
15258	Exhaust Baffle Plate		x										.75
15260	Cover—Exhaust Port		x	x									1.40
15261	Gasket—Exhaust Port Cover		x	x									.12
15262	O'Ring Valve	x	x	x									.25
15266	O'Ring Valve Assembly	x	x	x									1.20
15267	Gear Set (13-19 Ratio)	x	x										7.50
15268	Bevel Gear (13-19 Ratio—Sold in Sets Only) (Refer to 15267)	x	x										
15269	Pinion Gear (13-19 Ratio—Sold in Sets Only) (Refer to 15267)	x	x										
15274	Gas Tank and Decal Assembly			x									17.00
15275	Decal—Operating Instructions			x									.10
15276	Decal—Side			x									.10
15277	Gas Line Assembly			x									.96
15279	Shroud Assembly—Front			x									4.00
15284	Tank Mounting Bracket—Left			x									.40
15285	Tank Mounting Bracket—Right			x									.40
15288	Gasket—Carburetor (Used on "45" Motors Prior to Serial No. BB-58532)			x									.04
15292	Cylinder Block and Crankcase Assembly			x									30.00
15296	Carter Carburetor with Linkage Control (N-752S)			x									12.80
15302	Orifice Plate (For Motors after Serial No. BB-58532—Used with Manifold 15303)			x									.15
15303	Intake Manifold (For Motors after Serial No. BB-58532—Used with Orifice Plate 15302)			x									1.40
15310	Stud Carburetor			x									.08
15317	Tank Mounting Bracket Screw	x	x	x									.03

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL	
15318	Tank Mounting Locating Screw	x	x	x									.06
15322	Shut Off Cock			x				x					1.88
15323	Stem—Choke Control			x				x					.25
15324	Choke Control Assembly			x				x					.94
15325	Choke Stem and Pin Assembly			x				x					.35
15326	Cup Washer	x	x	x	x	x	x	x					.06
15329	Magneto (FW-2132)		x	x									40.25
15334	Carter Carburetor with Linkage Control (N-2021S)			x									12.80
15400	Powerhead Assembly		x										130.00
15401	Powerhead—Less Carburetor and Magneto		x										83.50
15402	Piston and Wristpin—.020 Oversize	x	x	x									4.60
15403	Piston Ring—.020 Oversize	x	x	x									.50
15409	Decal Set			x									.30
15411	Powerhead with Carburetor and Magneto			x									130.00
15412	Powerhead—Less Carburetor and Magneto			x									83.50
15413A	Gasket Set			x									.77
15413B	Powerhead Gasket Set			x									.62
15502	Stern Bracket (Refer to 15147)	x	x	x									
25000	Gearcase Housing (Refer to 25416)				x	x	x						
25003	Propeller Shaft Bearing Housing Assembly (Refer to 25419)				x	x	x						
25004	Intermediate Housing				x	x	x						9.00
25005	Pump Plate				x	x	x						.30
25009	Water Pump Housing Assembly (Refer to 25155)				x	x	x						
25010	Propeller Shaft				x	x	x						2.40
25011	Propeller Shaft and Gear Assembly				x	x	x						6.60
25012	Pump Eccentric				x	x	x						1.00
25013	Driveshaft (Refer to 25290)	x	x	x	x	x	x						
25017	Stud Gearcase and Intermediate Housing Retainer (Rear)				x	x	x						.44
25018	Stud Gearcase and Intermediate Housing Retainer (Front)				x	x	x						.44
25020	Motor Support Tube Assembly				x	x	x						11.20
25023	Pin Stern Adjusting Arm Clevis				x	x	x	x	x				.55
25027	Bearing—Swivel				x	x	x	x					.15
25029	Thrust Socket				x	x	x						1.20
25030	Motor Support Tube Casing—Available Only as Assembly 25682				x	x	x						
25031	Cylinder Head Cover				x	x	x	x					.75
25032	Lever Stern Adjusting Tilting				x	x	x						.32
25033	Key Reverse Stop				x	x	x	x	x	x			.03
25036	Swivel Bracket				x	x	x	x					1.80
25039	Tube—Drive Shaft Seal Extension				x	x	x						1.50
25040	Cylinder Head				x	x	x	x					4.25
25043	Motor Support Tube Casing Assembly—Rear (Available Only as Complete Assembly—Refer to 25682)				x	x	x						
25045	Spacer—Stern Adjusting Arm Thrust Socket				x	x	x	x	x	x			.15
25046	Thrust Washer—Motor Support Tube	x	x	x	x	x	x	x	x	x			.05
25047	Gasket—Exhaust Port Cover Plate				x	x	x	x					.15
25048	Exhaust Port Cover				x	x	x	x					1.45
25049	Plate—Exhaust Port Cover				x	x	x	x					.60
25051	Cam Follower	x	x	x	x								.85
25052	Stern Bracket—Left				x	x	x	x					2.85
25053	Stern Bracket—Right				x	x	x	x					2.85
25054	Pinion Gear (13-20 Ratio)	x	x	x	x	x	x						3.00
25055	Bevel Gear				x	x	x						4.10
25061	Pressure Pad—Clamp Screw	x	x	x	x	x	x	x	x				.06
25064	Lockspring Wristpin				x	x	x	x	x	x			.02
25065	Gasket—Intake Port				x	x	x	x					.02

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY												Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL		
25070	Stud Tilting				x	x	x	x					.30	
25071	Water Seal (C1 and C2)				x			x					.06	
25073	Water Inlet Tube Assembly (C1 and C2)				x								.64	
25074	Motor Support Tube Gasket				x	x	x						.15	
25076	Intake Port Cover				x	x	x	x					.15	
25077	Connecting Rod Assembly—Used on C1—"60" Motors				x								4.30	
25082	Gasket—Seal Retainer				x								.05	
25084	Pin—Pump Eccentric	x	x	x	x	x	x						.01	
25085	Propeller Nut	x	x	x	x	x	x						.40	
25087	Gasket—Propeller Shaft Bearing Housing				x	x	x						.03	
25088	Crankshaft—Used on C1 "60" Only				x								22.00	
25089	Pump Rotor				x	x	x						.75	
25090	Snap Ring—Water Pump	x	x	x	x	x	x						.01	
25093	Water Seal Pump Housing and Gearcase				x	x	x						.05	
25095	Gasket—Cylinder Head Cover				x	x	x	x					.05	
25096	Bolt—Starter Pivot	x	x	x	x	x	x	x					1.00	
25098	Pawl Retainer Spacer	x	x		x								.03	
25103	Spring—Starter Rewind	x	x	x	x	x	x	x					.95	
25104	Hook—Starter Rope	x	x	x	x	x	x	x					.05	
25107	Spring Starter Compression	x	x	x	x	x	x	x					.08	
25109	Anchor Starter Spring	x	x	x	x	x	x	x					.34	
25113	Ratchet Ring Starter	x	x	x	x	x	x	x					.80	
25114	Cylinder Block and Crankcase Assembly (Refer to 25908)				x	x								
25121	Pawl Retainer Assembly	x	x	x	x	x	x	x					1.60	
25124	Plug—Starter Handle (Refer to 25206)	x	x	x	x	x	x	x	x	x				
25125	Starter Handle	x	x	x	x	x	x	x	x	x			.25	
25126	Starter Cord Assembly (Refer to 25251)	x	x	x	x	x	x	x						
25127	Starter Pulley Assembly	x	x	x	x	x	x	x					2.40	
25129	Washer—Fixed Contact Clamp Screw (Refer to 2965F)	x	x	x	x	x	x	x	x	x				
25130	Screw—Fixed Contact Clamp (Refer to 5431F)	x	x	x	x	x	x	x	x	x				
25131	Shoe Mounting Screw (Refer to 5431F)	x	x	x	x	x	x	x	x	x				
25139	Seal Assembly (Refer to 25905)	x	x	x	x	x	x							
25140	Stern Adjusting Screw and Handle Assembly				x	x	x	x					1.55	
25141	Pin Stern Adjusting Anchor				x	x	x	x					.55	
25142	Spacer—Stern Bracket				x	x	x	x	x	x			.15	
25143	Stud—Tilt Adjusting Lever (Refer to 25333)				x	x	x	x						
25145	Clamp Screw and Handle Assembly	x	x	x	x	x	x	x	x	x			.65	
25146	Stern Bracket and Clamp Screw Assembly—Right				x	x	x	x					4.50	
25147	Stern Bracket and Clamp Screw Assembly—Left				x	x	x	x					4.50	
25150	Stabilizer Friction Ring				x	x	x	x					.15	
25154	Pins—Journal Bearing Location	x	x	x	x	x	x	x					.01	
25155	Water Pump Housing Assembly				x	x	x						1.80	
25156	Shear Pin	x	x	x	x	x	x						.02	
25157	Friction Clutch Assembly				x	x	x						1.00	
25158	Stud—Thrust Socket Fastener (Refer to 25334)	x	x		x									
25159	Propeller (Refer to 25614)				x	x	x							
25166	Spring Valve	x	x	x	x	x	x	x					.10	
25170	Cam Follower Spacer Washer	x	x	x	x								.01	
25173	Pivot Bolt Cover	x	x	x	x	x	x	x					.20	
25176	Starter Housing	x	x		x								6.00	
25177	Lid—Filler Cap (Refer to 25407)	x	x	x	x	x	x	x						
25178	Steering Handle Bracket (Refer to 25613)				x	x	x							
25179	Steering Handle (Refer to 25612)	x	x		x									
25180	Mounting Bracket—Gas Tank—Rear				x	x	x	x					.95	
25181	Speed Control Knob (Refer to 25611)	x	x	x	x	x	x	x						
25182	Bearing—Lower Main				x	x	x	x					1.30	
25183	Bearing—Upper Main (Refer to 25185)				x	x	x	x						

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price		
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL			
25184	Bearing—Lower Main (Refer to 25182)				x	x	x	x							
25185	Bearing—Upper Main				x	x	x	x							1.35
25187	Gasket—Cylinder Compression				x	x	x	x							.10
25188	Tank Seal (Refer to 25909)	x	x	x	x	x	x	x							
25189	Water Seal Gasket				x	x	x	x							.20
25191	Gasket—Spark Plug		x	x	x	x	x	x							.01
25195	Pin—Cam Follower				x										.15
25197	Stud—Carburetor		x	x	x	x	x	x							.05
25198	Gasket—Intake Manifold				x	x	x	x							.02
25199	Gasket—Carburetor	x	x		x	x									.01
25200	Gasket—Exhaust Port Plate				x	x	x	x							.15
25202	Mounting Bracket—Gas Tank—Side (Refer to 25672)				x										
25203	Carburetor Assembly (MD 5A)				x										12.65
25205	Speed Control Lever				x	x	x	x							.20
25206	Starter Handle Plug Assembly	x	x	x	x	x	x	x	x	x					.50
25207	Shear Pin Support Bracket	x	x	x	x	x	x	x							.10
25208	Filler Cap Latch (Grey)	x	x		x										.50
25209	Air Vent Bushing	x	x	x	x	x	x	x							.12
25210	Air Vent Screw	x	x	x	x	x	x	x	x	x					.10
25213	Small Set Screw—Carburetor Control Knob	x	x		x										.01
25215	Carburetor Link Control Assembly (MD 15B)				x	x									13.75
25217	Decal—Martin "60" (Refer to 25258)				x										
25218	Screw—Shroud Mounting	x	x	x	x	x	x	x							.02
25219	Spray Shield Assembly				x	x	x	x							1.00
25220	Stabilizer Compression Block	x	x	x	x	x	x	x	x	x					.03
25221	Stabilizer Compression Plate	x	x	x	x	x	x	x	x	x					.03
25222	Seal—Water Outlet Deflector (Refer to 25905)				x										
25223	Piston Ring				x	x	x	x							.40
25224	Dowel Pin	x	x		x										.03
25225	Bolt—Steering Handle Bracket				x	x	x								.05
25226	Grommet—Steering Handle				x	x	x	x	x	x					.05
25227	Pressure Pad—Steering Handle Bracket				x	x	x	x							.05
25228	Washer—Steering Handle Bracket				x	x	x	x							.02
25233	Control Linkage Rod				x										.15
25235	Control Linkage Spring	x	x		x										.03
25236	Pivot Control Linkage	x	x		x										.05
25239	Grip—Steering Handle (Refer to 25342)	x	x		x										
25240	Screw—Cam Follower Pin (Refer to 9-s-6)	x	x	x	x	x	x	x							
25242	Clip—Magneto Wire (Refer to 15152)	x	x	x	x	x	x	x	x	x					
25243	Stabilizer Friction Washer				x	x	x	x	x	x					.20
25244	Starter Bias Spring	x	x	x	x	x	x	x							.15
25245	Grease Plug	x	x	x	x	x	x	x	x						.02
25248	Valve Assembly (Refer to 25642)				x	x									
25249	Shut Off Cock (Used on "60" Model Prior to Serial No. C-64817)				x										1.50
25251	Starter Cord and Handle Assembly	x	x	x	x	x	x	x							1.90
25254	Gas Line Fitting Screen		x	x	x	x	x	x							.65
25255	Decal—Speed Control	x	x	x	x	x	x								.10
25256	Decal—Operating Instructions (Refer to 25370)				x	x									
25257	Decal—Carburetor		x		x										.10
25258	Decal—Side				x										.10
25259	Decal—Rear	x	x		x										.10
25262	Gas Line Assembly				x	x	x								.96
25266	Oil Seal—Crankshaft—Upper				x	x	x	x							.72
25267	Gasket—Grease Vent	x	x	x	x	x	x								.01
25268	Gasket—Grease Plug	x	x	x	x	x	x								.01
25269	Washer—Starter Pivot Bolt	x	x	x	x	x	x	x							.01
25270	Carburetor Control Cable Assembly	x	x		x										.70
25271	Retainer—Filler Cap	x	x	x	x	x	x								.10

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY										Price	
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS		200 SL
25273	Spring Washer	x	x	x	x	x	x	x					.05
25275	Shut Off Cock	x	x	x	x	x	x						1.50
25276	Filler Cap Assembly (Grey)	x	x		x								2.50
25278	Tension Spring—Filler Cap (Refer to 25609)	x	x	x	x	x	x	x					
25281	Swivel Locking Pin Assembly	x	x	x	x	x	x	x					.25
25284	Swivel Retainer Screw	x	x	x	x	x	x						.08
25286	Washer—Tilting Friction				x	x	x	x	x	x			.05
25287	Friction Washer—Steering Handle	x	x		x								.01
25290	Driveshaft	x	x	x	x	x	x						3.15
25292	Piston and Wristpin Assembly				x	x	x	x					4.50
25292A	Piston and Wristpin Assembly—.0015 Oversize				x	x	x	x					4.50
25292B	Piston and Wristpin Assembly—.003 Oversize				x	x	x	x					4.50
25292C	Piston and Wristpin Assembly—.030 Oversize				x	x	x	x					4.50
25293	Gasket—Lower Seal	x	x	x	x	x	x	x					.05
25294	Magneto Wico (FW-1740B)				x								40.25
25295	Seal—Lower Main Bearing (Refer to 25904)	x	x	x	x	x	x						
25296	Water Inlet Tube	x	x	x	x	x	x						.75
25297	Washer—Water Tube	x	x	x	x	x	x						.02
25298	Cam Spacer—Wico Magneto		x	x	x	x	x	x					.03
25300	Carburetor (MD 15A)				x								12.65
25301	Extension Drive Shaft				x	x	x						4.70
25302	Stud—Lower Unit Extension—Short				x	x	x						.55
25303	Stud—Lower Unit Extension—Long				x	x	x						.55
25304	Water Inlet Tube Extension C-1				x								1.10
25307	Lower Unit Extension Kit—C-1 and C-2				x								11.65
25308	Shim Extension Intermediate Housing				x	x	x						4.75
25310	Magneto Scintilla				x								25.00
25311	Scintilla Flywheel and Cam Assembly				x								10.00
25314	Scintilla Adapter				x								1.50
25315	Cam Spring Washer (Refer to 3081F)	x	x	x	x	x	x	x					
25316	Lower Unit Extension Kit—C-3 and C-4				x	x	x						11.65
25317	Water Inlet Tube—C-3				x	x	x						1.10
25321	Idle Adjusting Screw (Refer to 08427)				x	x							
25324A	Gasket Set (C-1 and C-2)				x								.99
25324B	Powerhead Gasket Set (C-1 and C-2)				x								.79
25325A	Gasket Set (C-3 and C-4)				x	x							.99
25325B	Powerhead Gasket Set (C-3 and C-4)				x	x							.79
25325C	Gasket Set						x						1.00
25326A	Decal Set (Prior to '49 Model)				x								.30
25326B	Decal Set (After '49 Model)				x								.30
25327	Friction Clutch Assembly (Refer to 25157)				x	x	x						
25333	Stud—Tilt Adjusting Lever				x	x	x	x					.30
25334	Stud—Thrust Socket	x	x	x	x	x	x	x					.15
25337	Grease Fitting				x	x	x	x	x	x			.12
25338	Recoil Starter Spring Spacer	x	x	x	x	x	x	x					.04
25339	Compression Nut	x	x	x	x	x	x	x	x	x			.10
25340	Compression Sleeve	x	x	x	x	x	x	x	x	x			.03
25341	Choke Control Assembly		x		x	x							.90
25342	Grip—Steering Handle	x	x		x								.20
25344	Connecting Rod Screw				x	x	x	x					.24
25353	Crankshaft				x	x	x	x					22.00
25354	Connecting Rod Assembly				x	x	x	x					4.30
25359	Set Screw—Carburetor Control Knob	x	x	x	x	x	x	x	x	x			.01
25364	Choke Stem and Pin Assembly (Refer to 25341)		x		x	x							
25366	Flushing Kit Plug	x	x	x	x	x	x	x	x	x			.10
25367	Nozzle—Flushing Kit (Refer to 25686)	x	x	x	x	x	x	x	x	x			
25368	Water Pump Housing—Flushing Kit				x	x	x						2.00
25369	Flushing Kit Assembly				x	x	x						2.80
25370	Decal—Operating Instructions				x	x							.10
25378	Grease Plug—Large	x	x	x	x	x	x	x	x	x			.10

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY										Price			
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS		200 SL		
25379	Gasket—Grease Plug	x	x	x	x	x	x	x	x						.01
25400	Cylinder Block and Crankcase Assembly (Refer to 25908)				x	x									
25401	Piston and Wristpin Assembly (Refer to 25292)				x	x	x	x							
25401A	Piston and Wristpin Assembly (Refer to 25292A)				x	x	x	x							
25401B	Piston and Wristpin Assembly (Refer to 25292B)				x	x	x	x							
25402	Key—Magneto	x	x	x	x	x	x	x							.10
25403	Intake Manifold Assembly				x	x	x								1.30
25404	Collar Assembly—Control Linkage	x	x		x										.25
25405	Powerhead Assembly (Refer to 25618)				x	x									
25406	Cord and Anchor Assembly	x	x	x	x	x	x	x							1.25
25407	Filler Cap (Grey) (Prior to '49 Model)	x	x	x	x	x	x	x							1.10
25408	Gas Tank Assembly (Black) (Prior to '49 Model)				x										21.00
25409	Shroud Assembly—Front				x										3.85
25410	Knob Assembly—Carburetor Control with Screw	x	x		x										.35
25411	Knob Assembly—Carburetor Shut Off with Screw	x	x		x										.30
25413	Stern Bracket Assembly				x	x	x								24.00
25414	Lower Unit Assembly (Refer to 25518)				x	x	x								
25415	Gearcase Assembly				x	x	x								28.60
25416	Gearcase Housing				x	x	x								10.60
25417	Propeller Shaft and Gear				x	x	x								9.50
25418	Gears (Ring and Pinion)				x	x	x								7.10
25419	Propeller Shaft Bearing Housing				x	x	x								2.60
25422	Seal—Lower Main Bearing (Refer to 25904)	x	x	x	x	x	x								
25423	Ring—Lower Main Seal	x	x	x	x	x	x	x							.24
25428	Tube—Drive Shaft Seal	x	x	x	x	x	x								1.20
25429	Tube Seal Spacer	x	x	x	x	x	x								.03
25449	Air Vent Screw Pad	x	x	x	x	x	x	x							.05
25453	Arm—Choke Control		x		x	x									.05
25454	Choke Control Linkage	x	x	x	x	x	x	x							.03
25455	Bracket—Choke Control	x	x		x	x									.16
25459	Seal—Gearcase Grease	x	x	x	x	x	x								.05
25461	Spacer—Drive Shaft Seal	x	x	x	x	x	x								.02
25465A	Drive Shaft Seal Assembly	x	x	x	x	x	x								3.30
25465B	Drive Shaft Seal Assembly—Long				x	x	x								3.30
25468	Set Screw—Carburetor Control Knob (Refer to 25359)	x	x	x	x	x	x	x	x	x	x				
25486	Carburetor (MD 15B)				x	x									12.65
25487	Carburetor Control Knob	x	x	x	x	x	x	x							.50
25501	Starter and Cover Assembly (Grey) (Prior to '49 Model)	x	x		x										19.80
25502	Powerhead (Refer to 25618)				x	x									
25503	Stern Bracket Assembly (Refer to 25413)				x	x	x								
25518	Lower Unit Assembly				x	x	x								45.50
25550	Steering Handle and Bracket Assembly							x							24.00
25600	Fuel Tank (Grey) ('49 and Later)				x										21.00
25601	Starter Housing (Black) (Refer to 25650)	x	x	x	x	x	x	x							
25603	Filler Cap Latch (Black) (Refer to 25652)	x	x	x	x	x	x	x							
25604	Filler Cap Assembly (Refer to 25910)	x	x	x	x	x	x								
25605	Spark Plug Nipple	x	x	x	x	x	x	x	x	x					.25
25609	Tension Spring Filler Cap	x	x	x	x	x	x	x							.03
25611	Speed Control Knob	x	x	x	x	x	x	x							.65
25612	Steering Handle	x	x		x										1.55
25613	Steering Handle Bracket				x	x	x								1.80
25614	Propeller				x	x	x								3.00
25616	Shroud—Rear				x	x	x	x							3.85
25617	Swivel Retaining Screw	x	x	x	x	x	x	x							.14
25618	Powerhead Complete				x	x									138.00
25619	Starter and Cover Assembly	x	x	x	x	x	x								19.80
25620	Powerhead—Less Carburetor and Magneto				x	x									91.50

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY												Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL		
25623	Shroud Assembly—Front				x	x							4.40	
25624	Filler Cap (Black) ('49 Model and Later)	x	x	x	x	x	x						1.10	
25637	Motor Support Tube Casing—Front (Refer to 25682)				x	x	x							
25640	Cam Follower Pin Screw				x	x	x	x					.15	
25641	Cam Follower				x	x	x	x					.75	
25642	Valve Assembly				x	x							.75	
25644	Choke Shaft and Primer (Refer to 08531)		x		x	x								
25650	Starter Housing (Black) ('49 Model and Later)	x	x	x	x	x	x	x					5.50	
25652	Filler Cap Latch ('49 Model and Later)	x	x	x	x	x	x	x					.50	
25672	Mounting Bracket—Side				x	x	x						.50	
25682	Motor Support Tube Casing—Front and Rear				x	x	x						9.40	
25683	Screw Plug—Flushing Kit	x	x	x	x	x	x		x				.50	
25684	Fiber Washer—Flushing Kit	x	x	x	x	x	x	x	x	x			.02	
25685	Coupling—Flushing Kit	x	x	x	x	x	x	x	x	x			.25	
25686A	Nozzle—Flushing Kit—Metal	x	x	x	x	x	x		x				.72	
25686B	Flushing Plug Kit							x		x			.84	
25688	Piston Ring—.030 Oversize				x	x	x	x					.40	
25691A	Stainless Steel Water Inlet Tube (C-3 and C-4)	x	x	x	x	x	x						1.50	
25691B	Stainless Steel Water Inlet Tube—Extension				x	x	x						2.00	
25695	Gearcase Seal	x	x	x	x	x	x						.10	
25698	Carburetor—Carter N-753S						x	x					10.80	
25699	Tank Seal (Refer to 25909)	x	x	x	x	x	x	x						
25700	Propeller Nut—Brass	x	x	x	x	x	x						.90	
25741A	Stainless Steel Water Tube (C-1 and C-2)				x								1.50	
25741B	Stainless Steel Water Tube—Extension (C-1 and C-2)				x								2.00	
25742	Carter Carburetor—Linkage and Choke Control (N-753S)						x	x					12.80	
25743	Elbow Fitting			x			x	x					.55	
25744	Shut Off Cock			x			x	x					1.55	
25745	Choke Control Assembly			x			x	x					.90	
25746	Bracket—Choke Control			x			x	x					.20	
25747	Choke Pin and Stem Assembly			x			x	x					.30	
25749	Decal—Operating Instructions						x	x					.10	
25750	Shroud Assembly—Front						x						4.40	
25751	Decal—Carburetor Control			x			x	x					.10	
25752	Gas Line Assembly						x	x					.75	
25755	O'Ring Valve ('49 Model and Later)				x	x	x	x					1.10	
25759	Bevel Gear (13-19 Ratio)				x								3.85	
25760	Pinion Gear (13-19 Ratio)				x								2.75	
25762	Cam Follower Pin Insert Bushing				x	x	x	x					.35	
25765	Propeller Shaft and Gear Assembly				x								6.60	
25767	"66" Gas Tank Assembly					x							21.00	
25768	Decal—Martin "66"					x							.10	
25778	Tank Mounting Bracket—Intake Side						x	x					.70	
25787	Decal Set "66"						x						.30	
25790	Gear Set (13-19 Ratio)				x								6.60	
25794	Gas Tank and Decal Assembly "75" Twist Grip						x						21.00	
25796	Decal—Martin "75"						x	x					.10	
25797	Cam—Carburetor Control			x									.20	
25799	Decal—Rear			x			x						.10	
25807	Lever—Throttle Control							x		x			.10	
25810	Guide Screw—Steering Handle							x		x			.04	
25814	Bracket—Steering Handle							x					4.50	
25815	Handle—Steering							x		x			4.20	
25827	Decal—Rear							x					.10	
25828	Shroud Assembly—Front							x					4.30	
25836	Bracket—Cable Support							x					.20	
25838	Spring—Clutch Lever							x		x			.10	

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL	
25840	Plug—Steering Handle							x		x			.45
25841	Locknut Cable Adjusting Screw							x		x			.02
25842	Tube Assembly—Clutch Control							x		x			5.30
25843	Cover Plate—Steering Handle							x		x			.60
25845	Button and Rod Assembly							x		x			1.20
25846	Collar Assembly							x		x			.30
25848	Spring—Throttle Control							x		x			.02
25849	Eccentric Assembly							x		x			.50
25852	Orifice Plate—Carburetor							x	x				.06
25854	Spacer Tank Seal (Refer to 25931)	x	x	x	x	x	x	x					
25856	Upper Drive Shaft							x					4.50
25857	Tube—Drive Shaft Enclosure							x					1.20
25859	Reversing Lock							x					.10
25860	Thrust Socket				x	x	x	x					1.20
25861	Tube Neutral Cable (Refer to 25878)							x					
25862	Bracket—Tube Support							x					.50
25863	Water Inlet Tube (Refer to 25949)							x					
25867	Motor Support Tube Assembly (Refer to 26032)							x					
25869	Neutral Clutch Lever							x					.50
25870	Seal Assembly—Lower Main Bearing							x					2.38
25871	Upper Cable Assembly (Refer to 25907)							x					
25874	Gasket—Motor Support Tube							x					.20
25875	Propeller							x					3.50
25876	Decal—Speed Control							x					.10
25877	Gas Tank and Decal Assembly							x					21.00
25878	Control Cable, Boot and Tube							x					3.50
25880	Filler Cap							x					1.30
25885	Torque Tube Assembly							x		x			8.40
25886	Gear and Shaft Pin				x	x	x						.25
25887	O'Ring—Enclosure Tube							x		x			.24
25888	Bracket—Throttle Control							x					.20
25889	Cable Clamp—No Longer Used							x					
25890	Clamp—Cable Nut—No Longer Used							x					
25893	Cylinder Block and Crankcase Assembly							x					33.00
25896	Cap—Grommet Retainer							x					.06
25897	Throttle Control Cable							x					1.90
25898	Spring—Neutral Lever Return							x					.15
25903	Gasket—Lower Main Bearing Seal	x	x	x	x	x	x	x					.05
25904	Seal—Lower Main Bearing	x	x	x	x	x	x						1.55
25905	Seal Assembly—Lower Main Bearing	x	x	x	x	x	x						2.50
25906	Grommet—Water Tube	x	x	x	x	x	x						.03
25907	Upper Cable Assembly							x					2.75
25908	Cylinder Block and Crankcase Assembly				x	x							33.00
25909	Tank Seal	x	x	x	x	x	x	x					.30
25910	Filler Cap Assembly	x	x	x	x	x	x						2.50
25919	Intake Manifold Assembly							x	x				1.25
25920	Carburetor Control—Cam							x					.20
25921	Cam—Carburetor Control					x	x						.20
25924	Sleeve—Starting Housing			x			x	x					.04
25925	Spring Washer	x	x	x	x	x	x	x					.10
25926	Adjusting Screw—Clutch Lever (Refer to 25878)							x		x			
25927	Motor Support Tube Casing Assembly							x					9.80
25930	Locknut—Cable Adjusting Screw							x					.03
25931	Spacer—Tank Seal	x	x	x	x	x	x	x					.02
25936	Water Pump Gasket							x		x			.03
25945	Snap Ring				x	x	x						.03
25946	Screw—Rear Tank Bracket Locating				x	x	x	x					.05
25948	Swivel Retaining Screw	x		x				x					.14
25949	Water Inlet Tube							x					1.00
25952	Magneto (FW-2141)				x	x	x	x					40.25

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY												Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL		
25955	Carter Carburetor (N-2022S)						x	x						10.80
25956	Carter Carburetor Linkage and Choke Control Assembly (N-2022S)						x	x						12.80
26000	Decal Set—Syncro Twist						x							.30
26002	Lower Unit Assembly							x						98.00
26003	Gear Case Assembly							x		x				42.00
26004	Gear Case Housing Assembly							x		x				13.25
26006	Intermediate Housing—Lower							x		x				12.50
26007	Bearing Plate (Refer to 55710)							x		x				
26008	Motor Support Tube Assembly (Refer to 26032)							x						
26009	Steering Handle Assembly							x						18.00
26010	Powerhead Assembly Complete							x						138.00
26011	Powerhead—Less Carburetor and Magneto							x						91.50
26012	Starter and Cover Assembly							x						19.80
26013	Filler Cap Assembly							x						2.50
26014	Stern Bracket Assembly				x	x	x	x						24.00
26016	Powerhead "75" Syncro Twist						x							138.00
26017	Powerhead—Less Carburetor and Magneto "75" Syncro Twist						x							91.50
26018A	Gasket Set							x						1.25
26018B	Powerhead Gasket Set						x	x						.80
26019	Decal Set							x						.30
26020	Cylinder Block and Crankcase						x							33.00
26021	Steering Handle Sub Assembly							x		x				9.90
26032	Motor Support Tube Assembly							x						11.50
55000	Cylinder Block and Crankcase Assembly (Refer to 55608)									x				
55001	Cam Follower—Lower									x	x			.62
55002	Cam Follower—Upper									x	x			.62
55003	Cylinder Head									x	x			8.00
55004	Cylinder Head Gasket									x	x			.20
55011	Piston Ring									x	x			.40
55013	Piston and Wristpin Assembly									x	x			4.90
55015	Connecting Rod and Cap Assembly (Includes Needles)									x	x			10.20
55016	Spring—Magneto Cam (Refer to 55185)									x	x			
55018	Crankshaft									x	x			30.00
55019	Magneto (FW-1927)									x	x			43.15
55020	Upper Main Bearing—Orange									x	x			6.80
55021	Lower Main Bearing—Torrington									x				2.75
55022	Pin—Bearing Locating									x	x			.08
55024	Gasket—Intake Manifold									x	x			.04
55025	Intake Manifold									x	x			1.75
55026	Spacer—Cam Follower									x	x			.01
55027	Spark Plug Insulator									x				.75
55028	Spark Plug and Washer (Refer to 100-s-4)	x			x					x	x			
55029	Main Bearing Seal									x	x			.60
55030	Reed Seal									x	x			.03
55031	Cam Follower Pin									x	x			.25
55032	Gasket—Exhaust Port Cover									x	x			.15
55033	Exhaust Port Cover Plate									x	x			.25
55034	Taper Dowel Screw									x	x			.10
55035	Exhaust Port Cover									x	x			1.25
55036	Gasket—Intake Port Cover									x	x			.04
55037	Intake Port Cover									x	x			1.10
55038	Gasket—Lower Main Cap									x	x			.04
55039	Cap—Lower Main									x				.20
55040	Stern Bracket—Right									x	x			4.00
55041	Stern Bracket—Left									x	x			4.00
55043	Upper Seal—Water Tube									x	x			.10

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY										Price		
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS		200 SL	
55045	Gasket—Motor Support Tube								x	x				.15
55046	Stabilizer Friction Ring								x					.60
55047	Motor Support Tube Casing (Refer to 55295)								x					
55049	Stern Adjusting Screw and Handle								x	x				1.50
55050	Carter Carburetor (N 754SA)								x	x				10.80
55051	Pin—Stern Adjusting Anchor								x	x				.80
55052	Adapter—Safety Chain								x	x				.06
55053	Bolt—Stern Bracket								x	x				.45
55054	Bolt—Thrust Socket								x	x				.30
55055	Tilt Adjusting Lever								x	x				.45
55056	Thrust Socket								x	x				1.50
55057	Intermediate Housing								x					11.40
55058	Motor Support Tube Assembly (Refer to 55639)								x					
55060	Reversing Lock								x	x				.12
55061	Bearing Ball—Propeller Shaft								x	x	x			3.00
55062	Water Inlet Tube								x					.80
55063	Pin—Gear and Propeller Shaft								x					.06
55064	Water Pump Housing Assembly								x					2.00
55067	Lower Unit Long Stud								x					.45
55068	Short Stud—Lower Unit								x					.24
55069	Pump Rotor (Refer to 55476)								x					
55071	Pin—Pump Rotor								x					.05
55072	Propeller Shaft								x					6.70
55073	Zerol Bevel Gear								x					4.80
55074	Zerol Bevel Pinion								x	x	x			4.40
55076	Tube—Drive Shaft Enclosure								x					1.10
55078	Drive Shaft								x					3.50
55080	Bearing—Drive Shaft								x	x	x			.90
55081	Lower Seal—Water Tube								x					.02
55082	Needle Bearing—Drive Shaft								x	x	x			.80
55089	Instruction Plate								x	x				.50
55090	Bolt—Bracket Mounting								x	x				.18
55091	Bolt—Rear Tank Mounting (Refer to 55090)								x					
55105	Gas Line Fitting								x	x				.98
55106	Gas Line and Fitting Assembly								x	x				2.05
55108	Cable—Vent Seal Control								x					1.30
55109	Collar—Flexible Vent Cable								x					.20
55110	Speed Control Lever								x	x				.40
55111	Link—Speed Control								x	x				.15
55112	Stator Lever								x	x				.20
55113	Pivot—Speed Control Lever								x	x	x			.15
55114	Hinge Pin—Speed Control Lever								x	x				.10
55115	Wave Washer—Speed Control Lever								x	x				.01
55116	Speed Control Knob								x	x				2.20
55118	Vent Tube—Upper—No Longer Used								x					
55121	Sleeve—Speed Control Lever								x	x				.06
55122	Spring—Choke Control								x	x				.04
55123	Spring Air Vent—No Longer Used								x					
55125	Bracket—Steering Handle (Refer to 55361)								x					
55126	Handle—Steering								x					4.60
55127	Bushing—Steering Handle								x	x	x			.18
55128	Grip—Steering Handle								x					.24
55129	Button Throttle Control								x					.42
55130	Rod Throttle Control								x					.35
55131	Spring—Throttle Control								x					.06
55132	Throttle Control Lever Assembly								x					.34
55134	Ring—Steering Handle Retaining (Refer to 55182)								x					
55135	Inner Washer—Steering Handle								x	x	x			.10
55136	Outer Washer—Steering Handle								x	x	x			.15
55137	Screw—Throttle Control Lever								x	x	x			.06

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL	
55138	Cable—Throttle Control								x	x			1.85
55139	Clip—Throttle Control			x				x	x	x			.05
55141	Shoe Spring—Throttle Control							x	x	x			.05
55142	Pin—Throttle Control Bracket								x	x			.15
55143	Disc—Throttle Control Grommet							x	x	x			.02
55144	Ring—Throttle Control Button							x	x	x			.22
55145	Screw—Friction Shoe							x	x	x			.03
55146	Cover Plate—Steering Handle								x				.30
55147	Grommet Cap								x	x			.04
55148	Clamp—Flexible Vent Tube								x				.05
55149	Grommet—Throttle Control								x	x			.05
55151	Tab—Pawl Friction								x	x			.12
55152	Spring—Starter Pawl								x	x			.04
55153	Pawl Starter								x	x			.45
55154	Starter Pulley								x	x			5.50
55156	Spring—Starter Rewind								x	x			1.75
55157	Starter Pulley Liner—No Longer Used								x	x			
55158	Starter Rope Assembly								x	x			1.60
55161	Plate—Pawl Friction								x	x			.88
55162	Bearing—Starter Pivot								x	x			1.30
55163	Plate—Rewind Spring Anchor								x	x			.35
55164	Spring—Access Cover								x	x			.10
55165	Spring—Anchor Plate								x	x			.16
55166	Pivot Pin—Access Cover								x	x			.05
55167	Retaining Ring								x	x			.06
55174	Pulley—Emergency Starter								x	x			.60
55175	Ratchet—Starter								x	x			2.50
55176	Starter Housing (Refer to 55612)								x				
55179	Decal—Maintenance Instructions								x	x			.10
55180	Access Cover Sub Assembly								x	x			3.00
55181	Carburetor Control Knob	x		x				x	x	x			.65
55182	Ring—Steering Handle Retainer							x	x	x			.10
55183	Grommet—Shut Off Cock								x	x			.08
55185	Spring—Magneto Cam								x	x			.06
55186	Water Pump Seal (Refer to 55483)								x				
55187	Oil Seal—Propeller Shaft							x	x	x			.95
55188	Pump Plate								x				.26
55189	Gasket—Propeller Shaft Bearing Housing								x				.05
55190	Washer—Drive Shaft Enclosure Tube Seal								x				.06
55193	Bolt—Pinion to Drive Shaft								x	x	x		.20
55195	Stud—Crankcase to Block								x	x			.10
55196	Stud—Cylinder Head								x	x			.10
55197	Stud—Manifold to Case								x	x			.10
55198	Stud—Carburetor								x	x			.10
55199	Gasket—Carburetor			x			x	x	x	x			.01
55200	Valve and O'Ring Assembly								x	x			1.50
55204	O'Ring Valve								x	x			.25
55205	Valve Spring								x	x			.15
55206	Pad—Reed Mounting								x	x			.45
55207	Reed—Bleed System								x	x			.08
55208	Stop—Bleed System—Reed								x	x			.06
55209	Gasket—Reed Mounting Pad								x	x			.02
55210	Nut—Bleed System								x	x			.05
55211	Tube—Upper Cylinder Bleed								x	x			.24
55212	Tube—Lower Cylinder Bleed								x	x			.15
55213	Compression Sleeve								x	x			.01
55214	Cam—Carburetor								x	x			.20
55215	Key—Magneto								x	x			.10
55216	Marker Lead Wire (Refer to 5925F)		x	x	x	x	x	x	x	x			
55217	Flap—Rear Shroud								x	x			.40

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price	
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL		
55218	Main Spring—Shroud Fastener								x	x				.10
55219	Choke Control Rod Assembly								x	x				.40
55221	Hair Pin Cotter—Choke Control Rod								x	x				.01
55222	Lever—Choke Rod								x	x				.05
55223	Choke Bracket Assembly								x	x				.10
55224	Carburetor Bracket								x	x				.15
55225	Intermediate Lever								x	x				.03
55227	Carburetor Link								x	x				.03
55228	Link—Control Rod								x	x				.10
55231	Seal—Vent Tube—No Longer Used								x					
55232	Adapter Fitting—Shut Off Cock								x	x				.30
55233	Gasket—Cap Seal Clutch Shaft								x	x	x			.01
55234	Fuel Tank Assembly								x					26.00
55235	Decal—Rear								x					.10
55236	Fuel Gauge (Refer to 55290)								x					
55237	Screw—Fuel Gauge								x	x				.15
55238	Gasket—Fuel Gauge—Rear								x	x				.02
55239	Gasket—Fuel Gauge—Rear (Refer to 55238)								x	x				
55241	Clip—Wrench								x					.10
55242	Fuel Cap Assembly								x					2.00
55246	Gasket—Fuel Cap (Part of Assembly 55242)								x					.05
55248	Chain—Fuel Cap (Refer to 55359)								x					
55249	Stop—Fuel Cap								x	x				.10
55250	Front Shroud Sub-Assembly								x	x				4.50
55251	Stud—Shroud Fastener								x	x				.18
55252	Cross Pin—Shroud Fastener								x	x				.04
55253	Rear Shroud Sub Assembly								x	x				7.00
55254	Centering Disc								x					2.40
55255	Clutch Plate								x					.10
55256	Clutch Disc								x					.10
55257	Clutch Spring								x					.15
55258	Propeller Spring Shield								x	x				.25
55259	Propeller Nut								x	x	x			.56
55260	Propeller								x					4.60
55261	Shut Off Cock								x	x				1.66
55262	Clutch Plate and Disc Assembly								x					3.20
55263	Pinion Thrust Washer								x	x	x			.30
55264	Wrench								x					.25
55265	Shim—Gear Bearing								x	x	x			.05
55266	Seal—Upper Drive Shaft Enclosure Tube								x					.72
55267	Lower Seal—Drive Shaft Enclosure Tube								x					.05
55272	Seal Ring—Fuel Cap								x	x				.15
55273	Fuel Cap								x					2.30
55275	Pin—Fuel Cap Chain								x					.04
55276	Fuel Cap Assembly (Refer to 55431)								x					
55287	Washer and O'Ring—Fuel Gauge								x					.25
55290	Gas Gauge—Metal								x	x				3.30
55294	Bleed Valve Assembly								x	x				1.00
55295	Motor Support Tube Casing								x	x				7.10
55296	Stabilizer Friction Ring								x	x				1.30
55300	Upper Intermediate Housing								x		x			10.20
55301	Water Pump Housing (Refer to 55711)								x		x			
55306	Bracket—Clutch Lever								x	x	x			2.00
55307	Pin—Clutch Lever								x	x	x			.15
55308	Clutching Lever								x	x				.25
55309	Clutch Spring								x	x				1.80
55310	Rotor—Water Pump								x	x				1.20
55312	Clutch Bushing								x	x				2.10
55313	Pin—Pump Rotor								x	x				.03
55314	Drive Shaft—Lower								x	x				3.50

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price	
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL		
55316	Key Drive Shaft							x		x				.01
55319	Upper Drive Shaft									x				4.10
55320	O'Ring—Water Tube							x		x				.18
55321	Fitting—Clutch Shaft							x		x				.12
55322	Shaft—Clutch Lever Actuating							x		x				.50
55323	Cover Plate—Water Pump (Refer to 55713)							x		x				
55324	Stud—Lower Unit							x		x				.30
55325	Snap Ring							x		x				.05
55327	Access Cover							x		x				.16
55328	Drive Shaft Enclosure Tube									x				.96
55329	Boot for Clutch Mechanism							x		x				.10
55330	Gasket—Gear Case							x		x				.06
55332	Gasket—Bearing Plate							x		x				.10
55333	Gasket—Propeller Shaft Bearing Housing Assembly								x		x			.05
55339	Cap Seal—Clutch Shaft							x		x				.20
55341	O'Ring							x	x	x				.15
55344	Neutral Clutch Lever Assembly									x				.75
55347	Bracket Cable Support									x				.35
55348	Bracket—Tube Support									x				.30
55352	Water Inlet Tube (Refer to 55729)									x				
55354	Spring—Declutching							x		x				.04
55358	Upper Cable Assembly—Clutch Control									x				1.25
55359	Chain—Fuel Cap									x	x			.08
55361	Steering Handle Bracket									x	x			4.10
55362	Propeller (Standard)										x			4.20
55366	Rear Decal										x			.10
55367	Propeller Shaft Bearing Housing and Seal Assembly								x		x			3.90
55368	Water Pump Housing Assembly (Refer to 55712)							x		x				
55369	Control Cable, Boot and Tube Assembly										x			4.20
55371	Clutch Spring and Bushing Assembly							x		x				6.60
55380	Thrust Collar							x		x				.60
55381	Pin—Thrust Collar							x		x				.05
55382	Snap Ring—Thrust Collar Pin							x		x				.02
55388	Gasket—Access Cover							x		x				.03
55389	Thrust Washer—Clutch Bushing							x		x				.24
55390	Spring—Clutch							x		x				.08
55391	Decal—Start and Shift									x				.10
55392	Clutch Plate							x		x				.05
55393	Pin—Clutch Plate Driver							x		x				.08
55394	Clutch Plate and Disc Assembly							x		x				2.00
55395	Clutch Disc							x		x				.06
55399	Driver—Clutch Plate							x		x				2.75
55400	Snap Ring—Clutch Driver							x		x				.03
55401	Seal Neutral Cable Tube							x		x				.02
55405	Zerol Bevel Gear Assembly							x		x				5.50
55408	Bushing							x		x				.12
55411	Cylinder Block and Case Assembly (Refer to 55678)										x			
55412	Gasket—Clutch Lever Bracket							x		x				.02
55414	Carburetor Cam Assembly										x			1.00
55415	Washer—Pivot Screw							x		x				.01
55418	Neutral Lever Return Spring										x			.10
55419	Propeller Shaft							x		x				4.50
55420	Air Vent Screw (Refer to 55487)										x	x		
55421	Washer—Air Vent Seal										x	x		.05
55422	Chain Retainer—Fuel Cap										x	x		.05
55423	Friction Spring—Air Vent										x	x		.03
55424	Drive Pin								x		x			.03

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL	
55431	Filler Cap Assembly								x	x			3.10
55433	Access Cover Sub Assembly (Refer to 55180)								x	x			
55435	Bracket Assembly									x			13.50
55440	Fuel Tank Assembly (Refer to 55738)									x			
55441	Washer Bearing									x			.01
55442	Stud—Lower Unit (Short)								x	x			.30
55443	Bearing Plate and Bracket (Refer to 55709)								x	x			
55445	Upper cable assembly									x			2.40
55446	Dowel—Block and Case									x	x		.10
55447	Cap—Sealing Nut								x	x			.05
55448	Sealing Nut Assembly								x	x			.25
55450	Washer Clutch Spring								x	x			.04
55453	Decal—Neutral								x	x			.10
55456	Cap—Lower Main Bearing									x	x		.75
55461	Starter Housing									x	x		11.10
55474	Spring—Clutch Control Detent								x	x	x		.02
55475	Gasket—Exhaust Port Cover (Refer to 55032)									x	x		
55476	Rotor—Water Pump									x			.90
55479	Grommet—Clutch Cable (Refer to 55445)										x		
55482	Plate—Clutch Driver								x		x		.10
55483	Water Pump Seal								x	x	x		.03
55487	Air Vent Screw									x	x		.50
55489	Clip—Drive Pin										x		.04
55493	Rivet—Speed Control Lever									x	x		.05
55504	Stern Bracket Assembly									x			24.00
55505	Powerhead—Less Carburetor and Magneto (Refer to 55611)									x			
55506	Starter and Cover Assembly									x			23.00
55507	Throttle Control Assembly									x			12.40
55509	Carter Carburetor and Linkage Control									x	x		12.80
55510	Steering Handle and Bracket Assembly										x		23.75
55512	Stern Bracket Assembly									x	x		24.00
55517	Powerhead (Refer to 55636)										x		
55521	Starter and Cover Assembly									x	x		23.00
55600	Decal Set									x			.30
55602A	Gasket Set									x			1.00
55602B	Powerhead Gasket Set									x	x		.69
55603	Flushing Kit									x			3.00
55604	Flushing Kit—Pump Housing									x			2.10
55605	Gearcase Assembly									x			35.00
55606	Tank Bracket									x			13.50
55607	Gearcase Housing									x			9.90
55608	Cylinder Block and Crankcase Assembly									x			40.00
55609	Starter Cord and Handle Assembly									x			2.40
55610	Propeller Shaft Bearing Housing									x			3.30
55611	Powerhead—Less Carburetor and Magneto									x			132.50
55612	Starter Housing and Accessory Cover									x			13.70
55613	Propeller Shaft Bearing and Gear									x			19.80
55614	Propeller Shaft Assembly									x			15.40
55615	Rod and Button Assembly									x			1.10
55616	Stern Bracket—Right									x	x		5.50
55617	Stern Bracket—Left									x	x		5.50
55632	Gear Set (Ring and Pinion)								x		x		9.90
55635A	Gasket Set										x		1.52
55635B	Powerhead Gasket Set (Refer to 55602B)									x	x		
55636	Powerhead Assembly—Complete										x		186.40
55637	Powerhead—Less Carburetor and Magneto										x		132.50
55638	Steering Handle Assembly										x		18.00
55639	Motor Support Tube Assembly									x	x		13.70
55640	Starter Cord and Handle Assembly									x	x		2.50

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION	INTERCHANGEABILITY											Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL	
55641	Lower Unit Assembly								x			114.00	
55642	Adapter							x	x			1.10	
55643	Flushing Kit							x	x			1.40	
55663	Washer							x	x			.05	
55665	Decal Set								x			.30	
55675	Motor Support Tube Assembly								x	x		13.70	
55678	Cylinder Block and Crankcase Assembly									x		40.00	
55709	Bearing Plate and Bracket Assembly							x	x			11.25	
55710	Drive Shaft Bearing Plate							x	x			5.50	
55711	Water Pump Housing							x	x			3.40	
55712	Water Pump Housing Assembly							x	x			5.10	
55713	Cover Plate—Water Pump							x	x			.30	
55714	Gasket—Water Pump Bearing Plate							x	x			.08	
55715	Gasket—Water Pump							x	x			.03	
55729	Water Inlet Tube Assembly									x		1.20	
55731	Propeller (Heavy Load)									x		4.20	
55738	Fuel Tank Assembly									x		26.00	
55739	Magneto (Refer to 55019)								x	x			
65158	Starter Handle	x	x	x	x	x	x	x	x	x		.44	
65432	Plug Flushing System							x	x	x		.15	

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

SCREWS, WASHERS AND NUTS

Part No.	DESCRIPTION & SIZE	INTERCHANGEABILITY											Price				
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL					
1-s-1	Screw (Refer to 17-s-1)	x	x	x													
1-s-3	Screw, 6-32x $\frac{3}{16}$ " Rd. Hd. St.	x	x		x	x			x								.01
1-s-4	Screw, 10-24x $\frac{1}{4}$ " Rd. Hd. St.				x				x	x							.01
1-s-7	Vent Screw, 10-24x $\frac{1}{16}$ " Rd. Hd. Br.	x		x													.01
1-s-14	Screw, 10-24x $\frac{1}{4}$ " Rd. Hd. St.							x		x							.01
1-s-15	Screw, 8-32x $\frac{1}{16}$ " Rd. Hd. St.						x	x									.01
2-s-1	Screw, $\frac{1}{4}$ -20x $\frac{1}{8}$ " Fil. Hd. St.	x	x	x	x	x											.02
2-s-2	Screw, $\frac{1}{4}$ -20x $\frac{3}{4}$ " Fil. Hd. St.				x	x	x	x									.02
2-s-3	Screw, $\frac{1}{4}$ -20x $2\frac{1}{2}$ " Fil. Hd. St.		x	x	x	x											.03
2-s-4	Screw, 10-24x $\frac{1}{2}$ " Fil. Hd. St.	x	x	x	x	x	x	x	x								.01
2-s-5	Screw, 10-24x $\frac{5}{8}$ " Fil. Hd. St.	x	x	x	x	x	x	x	x	x							.01
2-s-6	Screw, 10-24x $\frac{7}{8}$ " Fil. Hd. St.	x	x		x	x				x	x						.01
2-s-7	Screw, $\frac{1}{4}$ -20x $\frac{3}{4}$ " Fil. Hd. St.	x	x	x	x	x	x	x	x	x							.01
2-s-8	Screw, $\frac{1}{4}$ -20x1" Fil. Hd. St.			x	x	x	x	x			x						.02
2-s-9	Screw, $\frac{1}{4}$ -20x $\frac{5}{8}$ " Fil. Hd. St.			x	x	x	x	x									.01
2-s-10	Screw, 12-24x $\frac{3}{8}$ " Fil. Hd. St.	x	x	x	x	x	x	x	x	x							.01
2-s-11	Screw, 10-24x $\frac{3}{4}$ " Fil. Hd. St.		x	x	x	x	x			x	x						.01
2-s-12	Screw, $\frac{1}{4}$ -20x $2\frac{5}{8}$ " Fil. Hd. St.				x	x	x	x									.04
2-s-15	Screw, $\frac{1}{4}$ -20x $\frac{1}{2}$ " Fil. Hd. St.	x	x	x	x	x											.01
2-s-16	Screw (Refer to 2-s-3)		x	x	x	x											
2-s-17	Screw, $\frac{1}{4}$ -20x $2\frac{1}{4}$ " Fil. Hd. St.		x	x													.03
2-s-18	Screw, 10-20x $\frac{3}{8}$ " Fil. Hd. St.	x	x	x							x						.01
2-s-19	Screw, 12-24x $\frac{5}{8}$ " Fil. Hd. St.				x	x											.01
2-s-20	Screw, $\frac{1}{4}$ -20x $1\frac{1}{8}$ " Fil. Hd. St.	x															.03
2-s-21	Screw, $\frac{1}{4}$ -20x2" Fil. Hd. St.	x															.03
2-s-22	Screw, 10-24x1" Fil. Hd. St.										x	x					.02
2-s-25	Screw, $\frac{1}{4}$ -20x $1\frac{1}{8}$ " Fil. Hd. St.										x	x					.08
2-s-26	Screw, $\frac{1}{4}$ -20x $1\frac{1}{4}$ " Fil. Hd. St.				x	x	x	x									.02
2-s-27	Screw, $\frac{1}{4}$ -20x $1\frac{1}{8}$ " Fil. Hd. St.			x	x	x			x	x	x						.02
2-s-31	Screw, 10-24x $\frac{5}{8}$ " Fil. Hd. St.	x	x	x	x	x	x	x	x	x							.03
2-s-33	Screw, 10-24x $\frac{3}{8}$ " Fil. Hd. St.								x	x	x						.01
2-s-37	Screw, 8-32x $\frac{1}{2}$ " Fil. Hd. St.								x								.01
2-s-38	Screw, 10-32x $\frac{1}{4}$ " Fil. Hd. St.								x		x						.01
2-s-39	Screw, 10-24x $\frac{1}{16}$ " Fil. Hd. St.			x			x	x	x	x							.01
2-s-40	Screw, $\frac{1}{4}$ -20x $\frac{3}{4}$ " Fil. Hd. Br.								x	x	x						.04
2-s-41	Screw, 10-24x $\frac{1}{2}$ " Fil. Hd. St.	x								x	x						.02
2-s-42	Screw, 12-24x $\frac{1}{2}$ " Fil. Hd. St.							x		x							.01
2-s-43	Screw, 10-24x $\frac{3}{4}$ " Fil. Hd. St.			x				x	x	x							.01
2-s-44	Screw (Refer to 55290)										x	x					
2-s-47	Screw, $\frac{1}{4}$ -20x $\frac{5}{8}$ " Fil. Hd. St.										x	x					.02
2-s-48	Screw, 5-40x $\frac{1}{4}$ " Fil. Hd. St.										x	x					.05
2-s-49	Screw, 10-24x $\frac{3}{8}$ " Fil. Hd. St.										x						.02
2-s-50	Screw, 10-24x $\frac{3}{4}$ " Fil. Hd. St.			x					x		x						.04
2-s-52	Screw, $\frac{1}{4}$ -20x1" Fil. Hd. St.								x		x						.08
2-s-55	Screw, $\frac{1}{4}$ -20x $\frac{1}{2}$ " Fil. Hd.										x						.01
3-s-1	Screw, 8-32x $\frac{1}{4}$ " Ov. Bnd. Hd. St.				x	x											.01
3-s-2	Screw, 4-40x $\frac{3}{16}$ " Ov. Bnd. Hd. St.	x	x	x													.01
3-s-3	Screw, $\frac{1}{4}$ -20x $1\frac{3}{16}$ " Ov. Bnd. Hd. St.	x	x	x	x												.02
3-s-4	Screw, 10-24x $\frac{1}{2}$ " Ov. Bnd. Hd. St.	x	x		x	x											.01
3-s-7	Screw, 10-24x $\frac{1}{2}$ " Ov. Bnd. Hd. St.	x		x				x									.03
4-s-1	Screw (Refer to 4-s-6)	x	x	x	x	x	x										
4-s-2	Screw, 10-24x $\frac{5}{8}$ " Ov. Hd. St.	x	x	x	x	x	x	x	x	x							.01
4-s-5	Screw, 10-24x $\frac{3}{8}$ " Ov. Hd. St.	x	x	x	x	x	x	x									.01
4-s-6	Screw, $\frac{1}{4}$ -20x $1\frac{1}{2}$ " Ov. Hd. St.	x	x	x	x	x	x										.08
4-s-8	Screw (Refer to 4-s-6)	x	x	x	x	x	x										
5-s-1	Screw, 4x $\frac{1}{4}$ " Dr. St.	x	x	x	x	x	x	x	x	x							.01
5-s-2	Screw, 00x $\frac{3}{16}$ " Dr. St.	x	x	x	x	x	x	x	x	x							.01
5-s-4	Drive Screw, 00x $\frac{3}{16}$ " Dr. St.								x	x	x						.01
6-s-1	Screw (Refer to 13-s-1)				x												

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION & SIZE	INTERCHANGEABILITY											Price
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL	
6-s-2	Screw, 10-24x $\frac{3}{8}$ " Slt. Hd. St.								x				.02
6-s-3	Set Screw, $\frac{1}{4}$ -20x $\frac{1}{2}$ " Slt. Hd. St.							x	x	x			.02
6-s-4	Set Screw, 10-32x $\frac{1}{8}$ " Slt. Hd. St.								x				.02
6-s-6	Set Screw (Refer to 55344)							x		x			
6-s-7	Set Screw, 8-32x $\frac{1}{8}$ " Slt. Hd. St.							x		x			.02
7-s-1	Screw (Refer to 15159)	x	x	x									
7-s-2	Screw (Refer to 25344)				x	x	x	x					
7-s-5	Screw, Allen Head, $\frac{1}{4}$ -20x2" Hex. Hd. St.								x	x			.30
7-s-6	Screw, 10-32x $\frac{5}{8}$ " Hex. Hd. St.								x	x			.15
7-s-9	Screw, $\frac{1}{4}$ -20x1" Hex. Hd. St.							x		x			.40
8-s-2	Screw, 10-24x $\frac{3}{4}$ " Fl. Hd. St.				x	x	x	x					.01
8-s-3	Screw (Refer to 8-s-15)	x	x	x	x	x	x	x					
8-s-4	Screw, $\frac{1}{4}$ -20x1 $\frac{1}{4}$ " Fl. Hd. St.	x	x	x									.02
8-s-5	Screw, 4-40x $\frac{1}{4}$ " Fl. Hd. St.	x	x	x	x	x	x	x					.01
8-s-6	Screw, $\frac{1}{4}$ -20x $\frac{3}{8}$ " Fl. Hd. St.	x	x	x	x	x	x	x					.01
8-s-8	Screw (Refer to 8-s-19)									x			
8-s-13	Screw, 5-40x $\frac{1}{16}$ " Fl. Hd. St.								x	x			.01
8-s-14	Screw, $\frac{5}{16}$ -18x $\frac{3}{4}$ " Fl. Hd. St.								x	x			.02
8-s-15	Screw, 6-32x $\frac{1}{16}$ " Fl. Hd. St.	x		x				x					.01
8-s-17	Screw, $\frac{1}{4}$ -2x1 $\frac{1}{16}$ " Fl. Hd. St.								x				.05
8-s-18	Screw, 10-24x $\frac{5}{16}$ " Fl. Hd. St.							x	x	x			.01
8-s-19	Screw, 10-24x $\frac{7}{8}$ " Fl. Hd. St.								x	x			.01
8-s-21	Screw, $\frac{1}{4}$ -20x $\frac{3}{4}$ " Fl. Hd. St.							x		x			.06
8-s-22	Screw, $\frac{1}{2}$ -20x1 $\frac{1}{4}$ " Fl. Hd. St.	x	x	x									.10
8-s-24	Screw, 10-24x $\frac{5}{16}$ " Fl. Hd. St.							x		x			.02
9-s-1	Set Screw, 10-24x $\frac{1}{16}$ " Al. Hd. St.	x	x	x	x	x	x						.10
9-s-2	Set Screw (Refer to 15161)	x	x	x									
9-s-5	Set Screw, 8-32x $\frac{1}{16}$ " Al. Hd. St.	x	x		x								.05
9-s-6	Set Screw, 10-32x $\frac{1}{32}$ " Al. Hd. St.	x	x	x	x	x	x	x					.05
9-s-7	Set Screw, 10-24x $\frac{1}{4}$ " Al. Hd. St.								x	x			.10
10-s-11	Screw, $\frac{5}{16}$ -24x1 $\frac{3}{8}$ " Hex. Hd. St.							x	x	x			.26
10-s-12	Screw, $\frac{1}{4}$ -20x1 $\frac{1}{4}$ " Hex. Hd. St.								x	x			.04
11-s-1	Screw, $\frac{1}{4}$ -20x3 $\frac{1}{2}$ " Fil. Hd. St.	x	x	x									.10
11-s-2	Screw, $\frac{1}{4}$ -20x1 $\frac{7}{8}$ " Fil. Hd. St.	x	x	x									.08
12-s-1	Set Screw, 10-24x $\frac{1}{4}$ " Al. Hd.	x	x	x									.10
13-s-1	Screw, $\frac{5}{16}$ -24x $\frac{1}{2}$ " Slt. Hd. St.	x	x	x	x	x	x	x	x	x			.05
13-s-2	Set Screw, $\frac{5}{16}$ -24x $\frac{3}{4}$ " Slt. Hd. St.							x		x			.05
17-s-1	Screw, 4-40x $\frac{1}{4}$ " Rd. Hd. St.	x	x	x	x	x	x	x					.01
18-s-1	Screw, 5-40x $\frac{1}{4}$ " Sem. Fast. St.								x	x			.01
20-s-1	Nut, $\frac{1}{16}$ -20"	x	x	x	x	x	x	x	x	x			.03
20-s-3	Nut (Refer to 21-s-2)	x	x	x	x	x							
20-s-4	Nut, $\frac{1}{4}$ -28"								x	x			.02
20-s-5	Nut, $\frac{3}{16}$ -24"							x	x	x			.10
21-s-2	Nut, $\frac{3}{8}$ -24"	x	x	x	x	x	x	x					.02
22-s-3	Nut, $\frac{1}{4}$ -28"	x	x	x	x	x	x	x					.02
23-s-1	Nut, $\frac{3}{8}$ -24"				x	x	x	x	x	x			.10
23-s-2	Nut, $\frac{1}{4}$ -28"	x	x	x	x	x	x	x	x	x			.05
23-s-3	Nut, $\frac{5}{16}$ -18"				x	x	x						.10
23-s-4	Nut, $\frac{5}{16}$ -24"	x	x	x									.10
24-s-1	Nut, $\frac{1}{16}$ -20"	x	x	x	x	x	x	x					.03
25-s-1	Nut, 10-24"	x	x	x									.01
25-s-4	Nut, $\frac{1}{4}$ -28"	x	x	x									.08
25-s-5	Nut, $\frac{5}{16}$ -18"								x				.10
25-s-6	Lockwasher, 8-32"						x	x					.01
26-s-1	Nut, $\frac{1}{4}$ -20"	x	x		x	x							.02
29-s-1	Nut (Refer to 20-s-1)	x	x	x	x	x	x	x	x	x			
35-s-3	Washer, $\frac{3}{8}$ - $\frac{3}{4}$ x $\frac{1}{16}$ "	x	x	x	x	x	x						.05
35-s-4	Washer, $\frac{1}{8}$ - $\frac{1}{2}$ x $\frac{1}{32}$ "	x	x	x	x	x	x	x					.01
35-s-6	Washer (Refer to 35-s-37)	x	x	x	x	x	x						
35-s-11	Washer, $\frac{5}{16}$ - $\frac{1}{2}$ x $\frac{3}{64}$ "								x	x			.01

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION & SIZE	INTERCHANGEABILITY										Price			
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS		200 SL		
35-s-12	Washer, $\frac{1}{16}$ - $\frac{7}{16}$ x $\frac{3}{64}$ "	x			x	x									.01
35-s-14	Spacer, $\frac{21}{64}$ - $\frac{3}{4}$ x.032"	x	x		x	x									.02
35-s-16	Washer, $\frac{13}{32}$ - $\frac{13}{16}$ x $\frac{1}{16}$ "	x	x	x	x	x	x	x	x	x					.03
35-s-17	Washer, $\frac{1}{4}$ - $\frac{1}{2}$ x $\frac{3}{64}$ "	x	x	x	x	x	x								.01
35-s-18	Washer, $\frac{17}{64}$ - $\frac{7}{16}$ x $\frac{1}{16}$ "	x	x	x				x	x	x					.01
35-s-21	Washer (Refer to 15154)	x	x	x											
35-s-22	Washer, .158- $\frac{1}{4}$ x $\frac{1}{32}$ "		x		x	x			x	x					.01
35-s-23	Washer, $\frac{13}{64}$ - $\frac{3}{8}$ x $\frac{1}{32}$ "		x		x	x		x	x	x					.01
35-s-24	Washer, $\frac{17}{64}$ - $\frac{1}{16}$ x $\frac{3}{64}$ "				x										.01
35-s-25	Washer, $\frac{11}{32}$ - $\frac{29}{32}$ x $\frac{1}{16}$ "				x	x	x	x	x	x					.01
35-s-29	Washer, $\frac{17}{64}$ - $\frac{7}{16}$ x $\frac{1}{16}$ "								x						.02
35-s-33	Spacer (Refer to 25854)	x	x	x	x	x	x								
35-s-35	Washer, $\frac{1}{32}$ - $\frac{7}{16}$ x $\frac{3}{64}$ "								x	x					.01
35-s-36	Washer (Refer to 35-s-16)	x	x	x	x	x	x	x	x	x					
35-s-37	Washer, $\frac{25}{64}$ - $\frac{3}{4}$ x.032"	x	x	x	x	x	x	x							.03
35-s-38	Washer, .158- $\frac{1}{4}$ x $\frac{1}{32}$ "	x						x		x					.03
35-s-39	Washer, $\frac{13}{32}$ - $\frac{13}{16}$ x $\frac{1}{8}$ "	x	x	x											.02
36-s-1	Lockwasher for $\frac{1}{16}$ -20 Bolt	x	x	x	x	x	x	x							.02
36-s-2	Lockwasher for 10-24 Bolt			x			x	x	x	x					.01
36-s-3	Washer for $\frac{1}{4}$ -20" Bolt	x	x	x	x	x	x	x	x	x					.01
36-s-4	Washer for 12-24" Bolt	x	x	x	x	x	x	x	x	x					.01
36-s-5	Washer for 10-24" Bolt	x	x	x	x	x	x	x	x	x					.01
36-s-6	Lockwasher for $\frac{5}{16}$ -18" Bolt							x		x					.02
36-s-10	Lockwasher for 10-24" Bolt	x	x	x	x	x	x	x	x	x					.01
36-s-11	Lockwasher for $\frac{1}{4}$ -20" Bolt	x	x	x											.01
36-s-12	Lockwasher for $\frac{9}{16}$ -18" Bolt									x	x				.03
36-s-13	Lockwasher for 8-32" Bolt						x								.01
36-s-14	Lockwasher (Refer to 37-s-6)							x		x					
36-s-15	Lockwasher for $\frac{1}{4}$ -20" Bolt									x					.01
36-s-16	Lockwasher for 5-40" Bolt									x					.02
36-s-17	Washer for 10-24" Bolt	x								x					.01
36-s-19	Lockwasher for 12-24" Bolt							x		x					.01
37-s-2	Washer—Shakeproof, $\frac{1}{4}$ - $\frac{15}{32}$ x.025"		x		x										.01
37-s-3	Washer—Shakeproof, 10- $\frac{3}{8}$ x.022"	x	x	x	x	x	x	x							.01
37-s-4	Washer—Shakeproof, $\frac{1}{4}$ - $\frac{15}{32}$ x.025"							x	x	x					.01
37-s-6	Washer—Shakeproof, 12- $\frac{13}{32}$ x.022"							x		x					.01
37-s-7	Washer—Shakeproof (Refer to 37-s-3)	x													
38-s-1	Washer—Ctr. Sunk, 6- $\frac{19}{64}$ x.018"	x	x	x	x	x	x	x							.01
38-s-2	Washer—Ctr. Sunk, 10- $\frac{3}{8}$ x.022"				x	x	x	x	x	x					.01
38-s-3	Washer—Ctr. Sunk, $\frac{1}{4}$ - $\frac{15}{32}$ x.022"		x		x	x	x								.01
38-s-4	Washer—Ctr. Sunk, $\frac{1}{4}$ - $\frac{15}{32}$ x.022"	x		x				x	x	x					.03
39-s-1	Washer—Shakeproof, $\frac{3}{8}$ - $\frac{11}{16}$ x.035"	x	x		x	x		x							.01
39-s-2	Washer (Refer to 39-s-6)	x	x	x	x	x									
39-s-4	Washer—Shakeproof, $\frac{1}{4}$ - $\frac{3}{8}$ x.022"	x	x	x											.02
39-s-5	Washer—Shakeproof, $\frac{5}{16}$ - $\frac{19}{32}$ x.030"							x	x	x					.02
39-s-6	Washer—Shakeproof, $\frac{1}{4}$ - $\frac{3}{8}$ x.030"			x			x	x	x	x					.02
40-s-1	Oil Seal—Drive Shaft (Refer to 40-s-7)	x	x	x	x	x	x								
40-s-5	Oil Seal (Refer to 40-s-7)	x	x	x	x	x	x	x							
40-s-6	Oil Seal—Drive Shaft	x	x	x	x	x	x								.82
40-s-7	Oil Seal—Propeller Shaft	x	x	x	x	x	x	x	x	x					.82
40-s-8	Seal—Drive Shaft							x	NOx	x					.88
41-s-1	Washer, $\frac{21}{64}$ - $\frac{7}{32}$ x $\frac{1}{16}$ "	x	x	x	x	x	x								.02
41-s-2	Washer, $\frac{21}{64}$ - $\frac{15}{32}$ x $\frac{1}{16}$ "	x	x	x											.01
41-s-3	Washer, $\frac{17}{64}$ - $\frac{11}{16}$ x $\frac{3}{64}$ "	x	x	x	x	x	x	x	x	x					.02
50-s-1	Plug—Expansion				x	x									.01
50-s-2	Plug—Expansion		x	x	x	x	x	x		x					.01
50-s-3	Plug—Expansion (Refer to 02531)		x												
50-s-8	Expansion Plug							x		x					.02
50-s-9	Stainless Steel Plug	x	x	x	x	x	x	x	x	x					.02
50-s-10	Stainless Steel Plug		x		x	x				x	x				.02

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

Part No.	DESCRIPTION & SIZE	INTERCHANGEABILITY											Price			
		20	40	45	60	66	75 TG	75 TS	100 Std	100 TS	200 SS	200 SL				
50-s-11	Stainless Steel Plug	x		x												.02
55-s-3	Eyelet	x	x	x	x	x	x	x	x	x						.01
60-s-1	Cotter Pin, $\frac{3}{32} \times 1 \frac{1}{8}$ "	x	x	x	x	x	x									.02
60-s-2	Cotter Pin, $\frac{3}{32} \times \frac{3}{4}$ "	x	x	x	x	x	x	x								.02
60-s-3	Cotter Pin, $\frac{1}{16} \times \frac{1}{16}$ "	x			x	x		x	x	x						.01
60-s-6	Cotter Pin, $\frac{1}{16} \times \frac{3}{16}$ "							x	x	x						.01
60-s-7	Cotter Pin (Refer to 60-s-8)							x	x	x						
60-s-8	Cotter Pin, $\frac{3}{32} \times \frac{1}{8}$ "							x	x	x						.01
61-s-1	Cotter Hairpin		x		x	x		x		x						.01
61-s-2	Cotter Hairpin								x	x						.01
65-s-1	Drive Pin, $.066 \times \frac{1}{32}$ "	x	x	x	x	x	x	x								.02
65-s-2	Drive Pin, $.131 \times \frac{1}{16}$ "	x	x	x	x	x	x	x								.02
65-s-3	Drive Pin, $.115 \times \frac{1}{4}$ "	x	x	x												.01
65-s-5	Drive Pin, $.114 \times \frac{1}{32}$ "	x	x	x												.01
65-s-7	Drive Pin, $.099 \times \frac{1}{4}$ "	x	x	x	x	x	x	x								.01
65-s-10	Drive Pin, $.098 \times \frac{3}{16}$ "									x	x					.01
65-s-12	Drive Pin (Refer to 65-s-13)									x	x					
65-s-13	Drive Pin, $.066 \times \frac{1}{32}$ "									x	x					.01
65-s-14	Drive Pin, $.065 \times \frac{1}{16}$ "								x		x					.01
65-s-15	Drive Pin, $.132 \times \frac{1}{16}$ "								x		x					.02
65-s-16	Drive Pin, $.066 \times \frac{1}{8}$ "			x				x	x	x	x					.02
70-s-3	Rivet, $.187 \times 1 \frac{1}{16}$ " Rd. Hd. St.	x	x	x	x	x	x									.01
71-s-2	Rivet—Ctr. Sunk Hd., $\frac{5}{16} \times \frac{1}{4}$ "									x	x					.01
72-s-1	Rivet, $.140 \times \frac{1}{2}$ " Semi. Tub. Br.	x	x	x	x	x	x	x								.02
80-s-1	Ball—Vent Seal	x	x	x	x	x	x	x								.01
80-s-2	Ball	x	x	x	x	x	x	x	x	x						.01
80-s-5	Ball—Detent								x		x					.01
81-s-2	Roller Crankpin (Needle Bearing 26)									x	x					.65
82-s-4	Retaining Ring Follower									x	x					.05
82-s-5	Retaining Ring									x	x					.05
82-s-6	Snap Ring (Refer to 60-s-6)								x	x	x					
90-s-3	Spring—Swivel Lock	x	x	x	x	x	x	x								.01
90-s-4	Spring—Vent Seal	x	x	x	x	x	x	x	x	x						.04
100-s-1	Spark Plug and Washer (Champion J-8-J)		x	x	x	x	x	x								.85
100-s-4	Spark Plug and Washer (Champion J-6-J)	x		x						x	x					.85
100-s-5	Spark Plug and Washer (Champion J-11-J)				x			x								.85

SCREWS:

First and second dimensions indicate diameter and number of threads per inch.

Third dimension indicates length of screw.

WASHERS:

First dimension indicates the inside diameter.

Second dimension indicates the outside diameter.

Third dimension indicates thickness of washer.

NUTS:

Dimensions indicate the size of the screw or bolt on which the nut can be used.

INTERCHANGEABILITY CHART OF TILLOTSON CARBURETOR PARTS FOR

MODELS MD 5A, MD 5B, MD 8A, MD 8B, MD 9A, MD 9B, AND MD 15A, MD 15B

X DENOTES PARTS INTERCHANGEABLE ON MODELS INDICATED

PART NO.	DESCRIPTION	"60"		"40"		"20"		"60"		Price
		25203 MD 5A	25300 MD 5B	15026 MD 8A	15176 MD 8B	5016 MD 9A	5050 MD 9B	25300 MD 15A	25486 MD 15B	
0676	Main Adjustment Screw Gland Gasket	x	x	x	x	x	x	x	x	.02
0702	Main Adjustment Screw Gland	x	x	x	x	x	x	x	x	.30
0703	Main Adjustment Screw Packing Nut	x	x	x	x	x	x	x	x	.19
0705	Main Adjustment Screw Packing	x	x	x	x	x	x	x	x	.07
0992	Lockwasher, Body Retaining Screw	x	x	x	x	x	x	x	x	.02
01675	Lockwasher, Choke Shutter Screw								x	.02
02395	Main Nozzle Channel Plug Screw	x	x	x	x	x	x	x	x	.07
02510	Inlet Seat Gasket	x	x	x	x	x	x	x	x	.02
02531	Body Channel Welch Plug	x	x	x	x	x	x	x	x	.06
02658	Idle Tube Gasket							x	x	.02
03311	Fuel Bowl Drain Screw (Small)	x	x	x	x	x	x	x	x	.07
03804	Primer Pin Washer	x	x	x	x			x	x	.06
05204	Choke Shutter Screw (Refer to 05430)									
05430	Throttle Shutter Screw	x	x			x	x	x	x	.02
05591	Flange Gasket	x	x	x	x	x	x	x	x	.07
05725	Idle Adjustment Screw Spring	x	x	x	x	x	x	x	x	.07
06062	Body Retaining Screw and Lockwasher	x	x	x	x	x	x	x	x	.07
07804	Float	x	x	x	x	x	x	x	x	.94
07895	Inlet Needle Seat and Gasket					x	x			.90
07896	Fuel Bowl Plug Screw (Large)	x	x	x	x	x	x	x	x	.13
07900	Idle Tube Gasket	x	x	x	x	x	x			.02
07901	Float Lever Pinion Screw	x	x	x	x	x	x	x	x	.19
07903	Body Gasket	x	x	x	x	x	x	x	x	.13
07910	Throttle Return Spring		x	x	x			x	x	.13
07912	Choke Friction Pin Screw	x	x	x	x	x	x	x	x	.07
07921	Idle Tube			x	x	x	x			.33
07922	Main Nozzle	x	x							.39
07923	Choke Friction Pin	x	x	x	x	x	x	x	x	.07
07925	Choke Friction Pin Spring	x	x	x	x	x	x	x	x	.07
07929	Fuel Bowl (Refer to 08332)									
07938	Idle Tube	x	x							.33
07944	Throttle Return Spring	x				x	x			.13
07993	Primer Pin	x	x	x	x			x	x	.25
07994	Primer Pin Return Spring	x	x	x				x		.07
07995	Primer Pin Link	x	x	x	x			x	x	.19
07997	Primer Pin (Refer to 07993)									
08002	Choke Shaft and Primer Lever Complete	x	x	x				x		.77
08003	Idle Adjustment Screw					x	x			.33
08006	Throttle Shaft, Lever and Swivel	x				x	x			.66
08010	Choke Shutter	x	x	x	x			x	x	.13
08011	Throttle Shutter	x	x	x		x	x			.19
08013	Main Adjustment Screw (Long Shank) (Refer to 08404)	x	x					x	x	.50
08015	Body—Upper Half	x								3.80
08018	Inlet Needle Seat and Gasket	x	x	x	x			x	x	.90
08025	Gasket and Packing Set	x	x	x	x	x	x			.30
08026	Repair Parts Kit	x								3.30
08179	Main Nozzle			x		x				.39
08180	Main Adjustment Screw (Long Shank)					x	x			.45
08181	Body—Upper Half			x						3.80
08185	Throttle Shaft and Lever (Refer to 08421)									
08189	Throttle Shutter							x	x	.13
08252	Idle Adjustment Screw			x	x					.30
08256	Body—Upper Half					x				3.80
08267	Body—Upper Half		x							3.80
08314	Repair Parts Kit			x						3.30
08316	Repair Parts Kit		x							3.30

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

INTERCHANGEABILITY CHART OF TILLOTSON CARBURETOR PARTS FOR

MODELS MD 5A, MD 5B, MD 8A, MD 8B, MD 9A, MD 9B, AND MD 15A, MD 15B

X DENOTES PARTS INTERCHANGEABLE ON MODELS INDICATED

PART NO.	DESCRIPTION	"60"		"40"		"20"		"60"		Price
		25203 MD 5A	25300 MD 5B	15026 MD 8A	15176 MD 8B	5016 MD 9A	5050 MD 9B	25300 MD 15A	25486 MD 15B	
08332	Fuel Bowl	x	x	x	x	x	x	x	x	1.93
08403	Idle Adjustment Screw	x	x	x	x	x	x			.33
08404	Main Adjustment Screw	x	x	x	x			x	x	.50
08405	Main Adjustment Screw					x	x			.50
08406	Choke Shutter					x	x			.19
08421	Throttle Shaft and Lever (With Screw)		x	x	x			x	x	.44
08423	Main Nozzle				x		x	x	x	.33
08426	Idle Tube							x	x	.50
08427	Idle Adjustment Screw							x	x	.33
08429	Body—Upper Half							x		3.80
08472	Repair Parts Kit					x				3.03
08499	Choke Shaft and Collar					x				.28
08531	Choke Shaft and Primer Lever Complete				x				x	.77
08532	Body—Upper Half								x	3.85
08554	Gasket and Packing Set							x	x	.28
08555	Repair Parts Kit							x		3.25
08597	Throttle Return Spring Cotter Pin				x		x		x	.01
08605	Body—Upper Half				x					3.80
08607	Body—Upper Half						x			3.80
08609	Choke Shaft and Lever Assembly						x			.70
08716	Throttle Shutter				x					.19
08717	Primer Pin Return Spring (Refer to 08919)									
08722	Repair Parts Kit				x					3.30
08723	Repair Parts Kit						x			3.03
08724	Repair Parts Kit								x	3.25
08919	Primer Pin Return Spring				x				x	.06

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

MAGNETO PARTS LIST

MODEL MOTORS PART NO.	DESCRIPTION	"20" FW-1883 5088	"20" FW-2142 5105	"40" FW-1741B 15019	"45" FW-2132 15329	"60" FW-1740B 25294	"66" FW-1740C 25294	"75" ST FW-2141 25952	"100" Std. FW-1927 55019	Price
X2215	Lead Wire Group	x 14"		x 16" 18"		x 16" 18"	x 16" 18"			.42
2264A-B	Coil Wedge	x		x		x	x			.06
2965	Fixed Contact Clamp Screw Washer	x	x	x	x	x	x	x	x	.05
2972	Shaft Key	x	x	x	x	x	x	x		.10
3081	Cam Spring Washer	x	x	x	x	x	x	x		.05
3497A-B	Coil Wedge	x		x		x	x			.06
5431	Condenser Clamp Screw	x	x	x	x	x	x	x	x	.05
5431	Fixed Contact Clamp Screw	x	x	x	x	x	x	x	x	.05
5431	Condenser Connection Screw	x	x	x	x	x	x	x	x	.05
5445	Core Screw	x		x		x	x		x	.05
5446	Cam Wiper Felt	x	x	x	x	x	x	x	x	.05
X5460	Coil Group	x		x		x	x			5.40
X5463	Condenser Group	x	x	x	x	x	x	x	x	1.50
5465	Breaker Cam	x		x		x	x			1.50
X5471	Stator Plate Assembly (Replacement)	x								4.60
X5479	Rotor					x	x			21.15
X5485	Stator Plate Assembly (Replacement)			x		x	x			4.60
5486	Lead Wire Bushing	x	x	x	x	x	x	x	x	.05
5488	Control Linkage Pivot (Refer to 25236)	x								
5489	Control Linkage Pivot Washer	x	x							.05
5490	Control Linkage Pivot Cotter Pin	x	x							.05
X5816	Friction Shoe Group	x	x	x	x	x	x	x	x	.25
5925	Lead Wire Marker			x	x	x	x	x	x	.05
X6277	Stator Plate Unit (Incl. Coils, Condensers, etc.)			x		x	x			25.45
X6337	Stator Plate Unit (Incl. Coils, Condensers, etc.)	x								14.55
X6404	Rotor	x		x						24.45
7018	Breaker Cam		x		x			x		1.50
7041	Breaker Slide		x		x			x	x	.10
X7046	Breaker Contact Set	x	x	x	x	x	x	x	x	1.80
X7120	Coil Group	x		x		x	x			5.40
7167	Terminal Coupling (Sold with 7120 Coil to make 5460)	x		x		x	x			
7218	Breaker Cam								x	1.50
X7224	Rotor								x	22.60
X7238	Stator Plate Unit (Incl. Coils, Condensers, etc.)								x	26.05
X7296	Stator Plate Unit (Including Coils, Condensers, etc. Refer to X6277)									
7298	Control Linkage Pivot		x							.20
X7310	Rotor (Refer to X5479)									
X7345	Coil Group								x	5.40
X7379	Lead Wire Group				x					.45
X7381	Lead Wire Group				x			x		.45
X7500	Coil Group		x		x			x		4.75
7537	Core Screw		x		x			x		.05
Y7558	Rotor		x		x					24.40
Y7559	Rotor							x		21.15
X7562	Stator Plate Unit (Incl. Coils, Condensers, etc.)				x			x		24.40
X7563	Stator Plate Unit (Incl. Coils, Condensers, etc.)		x							14.55
X7598	Lead Wire Group		x							.50
8732	Primary Lead Wire Clip Screw		x		x			x		.05
X8837	Lead Wire Group								x	.45

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

INTERCHANGEABILITY CHART OF CARTER CARBURETOR PARTS

PART NO.	DESCRIPTION	"45"		"75" TG	"75" TS		"100" Std.	"100" TS	Price
		N752S N752SA 15256	N2021S N2021SA 15333	N753S N753SA 25698	N753S N753SA 25698	N2022S N2022SA 25955	N754S N754SA 55050	N754S N754SA 55050	
1A-73	Flange Gasket	x	x	x	x	x	x	x	.14
2-139	Throttle Valve	x	x						.14
2-140	Throttle Valve			x	x	x			.14
2-141	Throttle Valve						x	x	.14
3-686S	Throttle Shaft and Lever Assembly			x	x	x			1.01
3-701S	Throttle Shaft and Lever Assembly						x	x	1.01
3-734S	Throttle Shaft and Lever Assembly	x	x						1.01
7-164S	Choke Valve (Refer to 7-180S)	x	x	x	x	x	x	x	
7-165S	Choke Valve Assembly (Refer to 7-180S)	x	x	x	x	x	x	x	
7-180S	Choke Valve Assembly	x	x	x	x	x	x	x	.41
11-203S	Low Speed Jet Assembly	x	x						.68
11-204S	Low Speed Jet Assembly			x	x	x			.68
11-209S	Low Speed Jet Assembly						x	x	.68
12-337	Nozzle (Refer to 12-387)	x							
12-337	Nozzle (Refer to 12-379)			x	x		x	x	
12-358	Nozzle (Refer to 12-379)			x	x	x	x	x	
12-379	Nozzle			x	x	x	x	x	.54
12-387	Nozzle	x	x						.54
14-408S	Choke Shaft and Lever Assembly	x	x	x	x	x	x	x	.68
20-22	Needle Seat Gasket	x	x	x	x	x	x	x	.07
20-110	Bowl Nut Gasket	x	x	x	x	x	x	x	.07
21-106S	Float and Lever Assembly	x		x	x		x	x	2.03
21-139S	Float and Lever Assembly		x			x			2.03
23-37	Bowl	x		x	x		x	x	1.01
23-42	Bowl		x			x			1.01
23A-19	Bowl Ring Gasket	x	x	x	x	x	x	x	.14
24-23	Float Lever Pin	x	x	x	x	x	x	x	.07
25-171S	Needle and Seat Assembly	x		x	x		x	x	1.08
25-223S	Needle and Seat Assembly		x			x			1.08
30A-47	Idle Adjustment Screw (Refer to 30A-53)			x	x	x			
30A-49	Idle Adjustment Screw (Refer to 30A-54)						x	x	
30A-50	Idle Adjustment Screw (Refer to 30A-52)	x	x						
30A-52	Idle Adjustment Screw	x	x						.41
30A-53	Idle Adjustment Screw			x	x	x			.41
30A-54	Idle Adjustment Screw						x	x	.41
39-10	Valve Attaching Screw (Refer to 101-320)	x	x	x	x	x	x	x	
47-11	Welsh Plug	x	x	x	x	x	x	x	.04
61-302	Idle Adjustment Screw Spring (Refer to 61-475)	x	x	x	x	x	x	x	
61-369	Choke Shaft Spring	x	x	x	x	x	x	x	.07
61-406	Needle Pull Clip	x		x	x		x	x	.06
61-411	Throttle Valve Return Spring	x	x	x	x	x	x	x	.20
61-475	Idle Adjustment Screw Spring	x	x	x	x	x	x	x	.14
101-320	Valve Attaching Screw	x	x	x	x	x	x	x	.03
116-16	Choke Shaft Ball	x	x	x	x	x	x	x	.03
150-171	Float Stop Pin	x	x	x	x	x	x	x	.02
159-135S	Adjustable Main Metering Screw (Refer to 159-156S)	x		x	x				
159-138S	Adjustable Main Metering Screw Assembly						x	x	1.01
159-156S	Adjustable Main Metering Screw Assembly	x	x	x	x	x			1.01
163-53	High Speed Needle Packing		x			x			.07
65-s-1	Float Stop Pin (Refer to 150-171)	x		x	x		x	x	

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

INTERCHANGEABILITY CHART OF SYNCRO-TWIST PARTS FOR "45," "66" & "75"

Part No.	DESCRIPTION	"45"	"66" and "75"	List
SA-1	R. H. Bracket		x	.65
SA-2	Cable Assembly		x	3.00
SA-4	Quadrant Assembly		x	.80
SA-6	Quadrant Assembly	x		.80
SA-7	Cable Assembly	x		3.00
SA-51-1	Rubber Grip Assembly	x	x	.65
SSA-3	Gear Housing Sub-Assembly	x	x	3.40
O-1	Rotatable Tube	x	x	.66
O-4	Gear and Drum	x	x	.70
O-5	Gear	x	x	.60
O-6	Drive Shaft	x	x	.30
O-7	Driving Lug	x	x	.03
O-9	Gear Housing Cap	x	x	1.16
O-10	Bolt	x	x	.08
O-13	Cable Clamp	x	x	.04
O-18	Pivot Bolt	x	x	.10
O-20	Collar—Includes $\frac{1}{32}$ " x $\frac{1}{8}$ " Set Screw	x	x	.56
O-22	Friction Shoe	x	x	.03
O-23	Pin	x	x	.02
O-24	$\frac{8}{32}$ x $\frac{1}{8}$ " R. H. Machine Screw		x	.02
O-25	$\frac{8}{32}$ " x $\frac{3}{8}$ " Machine Screw	x	x	.01
O-26	Locknut— $\frac{1}{4}$ -28 H.P. x $\frac{1}{8}$ "		x	.03
O-27	Lockwasher— $\frac{1}{4}$ Med. Press	x	x	.02
O-28	Cotter Pin, $\frac{1}{8}$ " x $\frac{1}{2}$ "	x	x	.02
O-29	Slotted Set Screw	x		.02
O-30	Locking Screw	x	x	.01
O-4M	Left Hand Bracket		x	.40
O-8M	Spacer	x	x	.06
O-9M	Cable Support		x	.25
O-13M	R. H. Bracket	x		.65
O-14M	L. H. Bracket	x		.40

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL

MANUALS

Part No.	DESCRIPTION	List Price	Part No.	DESCRIPTION	List Price
5079	"20" Owners Manual (Prior to '49)	1.00	25632A	"60" Owners Manual (Prior to '49)	1.00
5079B	"20" Owners Manual ('49 to '53)	1.00	25632B	"60" Owners Manual ('49 and later)	1.00
5106	"20" Owners Manual ('53 or later)	1.00	25739	Technical Service Manual	1.00
5833	Master Manual (Net)	4.50	25793	"75" Twist Grip Owners Manual	1.00
15220	"40" Owners Manual (Prior to '49)	1.00	25922	"75" Twist Shift Owners Manual	1.00
15220B	"40" Owners Manual ('49 and later)	1.00	55269	"100" Standard Owners Manual	1.00
15298	"45" Owners Manual (Prior to '53)	1.00	55455	"100" Twist Shift Owners Manual	1.00

TOOLS—ACCESSORIES

Part No.	DESCRIPTION	Price
5289	Test Propeller "20" only (Net)	1.75
5801	Shear Pin Kit and Display Card	7.20
5808	Bushing for Tiller Bar	.10
5825	Tiller Bar for "100"	3.95
5827	Oil Seal Driver (Net)	1.00
5828	Needle Bearing Driver (Net)	1.50
5829	Bronze Bearing Driver (Net)	1.25
5835	Adapter—Bronze Bearing Driver (Net)	1.00
15113	Wristpin Punch "20", "40", "45" (Net)	1.00
15123	Ring Compressor "20", "40", "45" (Net)	1.50
15253	Center Main Facing Tool "40", "45" (Net)	6.00
15289	Test Propeller "40", "45" (Net)	1.75
15407	Ring Compressor .020—"20", "40", "45" (Net)	1.50
15408	Tyco Twist Grip "40", "45"	8.65
25263	Mag. Puller—Complete (Net)	1.50
25285	Screw for Mag. Puller (Net)	.25
25289	Test Propeller—"60", "66", "75" T.G. (Net)	1.75
25306	Ring Compressor "60", "66", "75" T.G., "75" T.S. (Net)	1.50
25492	Wristpin Punch "60", "66", "75" T.G., "75" T.S., "100" Std. and "100" T.S. (Net)	1.00
25628	Centering Ring (Net)	.25
25671	Abrasive Discs (Net)	.05
25678	Valve Gripping Tool (Net)	1.50
25690	Center Main Facing Tool "60", "66", "75" T.G., "75" T.S. (Net)	6.00
25696	Valve Checking Tool Gauge Assembly (Net)	8.00
25697	Ring Compressor .030—"60", "66", "75" T.G., "75" T.S. (Net)	1.50
25719	Offset Screwdriver (Net)	1.50
25720	3-M Sealer EC-930-M (1 pint) (Net)	1.50
25721	Kalasign Solvent (Net)	.35
25729	Shear Pins Set—No. 6	2.50
25730	Shear Pins—Assorted	12.50
25736	Tyco Twist Grip—"60", "66", "75" T.G.	8.65
25738	Michigan Propeller—8" x 9"—"60", "66", "75" T.G.	5.50
25740	Hammerloid Grey Paint—No. 33 (1 pint)	2.00
25763	Tiller Bar—"60", "66", "75" T.G., "75" T.S.	3.95
26015	Test Propeller—"75" Twist Shift (Net)	2.50
55271	Test Propeller—"100" Std. (Net)	2.00
55601	Ring Compressor—"100" Std., "100" T.S. (Net)	1.50
55625	Propeller Adapter "100" Std.	2.90
55627	Remote Control Kit "100" Std.	1.60
55634	Test Propeller "100" T.S. (Net)	2.50

WHEN ORDERING PARTS ALWAYS INDICATE MOTOR SERIAL NO. — MOTOR SERIES — MODEL