

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER  
OF MOTOR WHEN ORDERING PARTS

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	302647	Clamp	4
2	304029	Hose	2
3	375788	Body Assembly	1
4	302871	Screw	1
5	376730 304574	Gear (Model RD-18) Gear (Models RD-18E & 18C)	1
6	303854	Bushing	1
7	303142	Pinion	1
8	303107	Washer	1
9	303951	Screw	1
10	302736	Spring	1
11	376296  376694	Gear & Shaft Assembly - Short (Model RD-18) Gear & Shaft Assembly - Short (Models RD-18E & 18C)	1
12	304151	Screw	4
13	17-182	Nut	1
14	302051	Spring	1
15	376740	Steering Bracket, Pilot Shaft & Dowel Pin	1
16	303913	Washer	2
17	303912	Nut	2
18	303912	Nut	2
19	303311	Screw	1
20	303889	Nut	2
21	303722	Screw	1
22	303721	Clip	1
23	15-268	Cotter Pin	3
24	304379	Lever	1
25	304377	Pin	1
26	303191	O-Ring	1
27	375766	Shift Lever	1
28	51-137	Lockwasher	1
29	376287	Bracket & Shaft Assembly	1
30	300258	Screw	2
31	21-165	Washer	1
32	300646	Screw	9
33	303870	Shift Rod-Upper	1
34	304545	Gasket	2
35	303393	Screw	4
36	376786	Exhaust Loading Tube Assembly	1
37	304517	Stud	2
38	25-196	Washer	1
39	376439	Stern Bracket & Clamp Screw Assembly-Star	1
40	302865	Lockwasher	2
41	302509	Screw	2
42	303862	Cover Plate	1
43	300355	Screw	2
44	132679	Screw	9
45	302894	Gland Nut	1
46	303879	Rubber Mount	2
47	303890	Acorn Nut	2
48	39-176	Screw	8
49	303887	Washer	4
50	303882	Rubber Mount	1
51	304023	Gasket	1
52	304446	Housing - Port	1
53	304452	Screw	2
54	19-124	Lockwasher	4
55	303883	Screw	2
56	376802	Exhaust Housing, Water Tube & Stud Assembly	1
57	303881	Rubber Mount	1
58	303886	Washer	6
59	303888	Screw	2
60	11-185	Screw	2
61	303918	Bumper	2
62	303961	Retainer	2

PHOTO NO.	PART NO.	NAME OF PART	QTY PER MOTOR
63	303393	Screw	4
64	304447	Housing - Star	1
65	7-170	Gland	1
66	303890	Acorn Nut	2
67	303880	Rubber Mount	2
68	304680	Water Tube	1
69	302803	Nut	1
70	303252	Washer	1
71	301656	Spring	1
72	303282	Friction Block	1
73	303213	Grip	1
74	302710	Screw	1
75	302709	Groove Pin	1
76	376414  376693	Gear & Shaft Assembly - Long (Model RD-18) Gear & Shaft Assembly - Long (Models RD-18E & 18C)	1
77	302804	Cotter Pin	1
78	304218	Plate	1
79	301992	Stud	5
80	376354	Steering Handle	1
81	302712	Washer	1
82	302717	Bushing	1
83	302703	Thrust Washer	1
84	302631	Spring Washer	1
85	302721	Screw	1
86	304540	Baffle Plate	1
87	303867	Thrust Washer	1
88	303696	Pin	1
89	303936	Liner	1
90	303928	Plate	1
91	303929	Spacer	1
92	41-178	Screw	1
93	551113	Spring	1
94	302637	Conical Washer	2
95	303885	Swivel Bracket	1
96	303863	Arm	1
97	303971	Spring	1
98	303954	Locking Lever	1
99	303955	Rod	1
100	15-268	Cotter Pin	3
101	303868	Liner	1
102	303957	Link	1
103	303956	Shaft	1
104	303953	Link	1
105	303933	Bumper	1
106	302643	Bolt	1
107	303775	Washer	1
108	375747	Clampscrew & Handle Assembly	2
109	376438	Stern Bracket & Clampscrew Assembly - Port	1
110	376303	Tilting Lever Assembly	1
111	41-48	Swivel Plate	2
112	302420	Retainer	2
113	304168	Gasket	4
114	304169	Gasket	1
115	304380	Bow Washer	1
116	304865	Spring	1
117	376730  304573	Screw - Idle Stop (Model RD-18) Screw - Idle Stop (Models RD-18E & 18C)	1
118	15-254	Nut	2
119	304389	Carrying Handle	1
120	304392	Screw	3
MODEL RDL-18, 18E & 18C PARTS THAT DIFFER FROM MODEL RD-18, 18E & 18C			
4	304135	Screw (RDL)	1

See Page 17 for additional Model RDL-18, 18E & 18C parts

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER