| ENGINE APPLICATION GUIDE | | | |
|--|--|---|---|
| ENGINE MAKE | SHIFT CABLE | THROTTLE CABLE | SHIFT CABLE ATTACHMENT HOLE |
| JOHNSON/EVINRUDE; OMC I/O, MERCURY 18 & 25 H.P. | CABLE "PULLS" TO GO FORWARD | CABLE "PUSHES" TO OPEN THROTTLE | SHORT(EXCEPT OMC "KING COBRA" I/O USES LONG HOLE) |
| MERCURY & MARINER OUTBOARDS; ERCRUISER I/O's | CABLE "PULLS" TO GO FORWARD | CABLE "PULLS" TO OPEN THROTTLE | LONG |
| VOLVO I/O | CABLE "PUSHES" TO GO FORWARD | CABLE "PULLS" TO OPEN THROTTLE | STANDARD |
| YAMAHA 90H.P. AND UP; US MARINE (FORCE) | CABLE "PULLS" TO GO FORWARD | CABLE "PUSHES" TO OPEN THROTTLE | STANDARD |
| HONDA; SUZÜKI; TOHATSU (ALL MOD- ELS); YAMAHA 70 H.P. AND UNDER | GO FORWARD | CABLE "PULLS" TO OPEN THROTTLE | STANDARD |
| GAS) | MOST INBOARD TRANS- MISSIONS "PULL" TO GO FORWARD. | MOST INBOARD THROTTLES OR GOVERNORS "PULL" TO OPEN. | STANDARD |
| YAMAHA I/O's,(ALL) | CABLE "PULLS" TO GO FORWARD | CABLE "PULLS" TO OPEN THROTTLE | STANDARD |