


LIST OF PARTS

- 1 Screw - Gear Housing to Driveshaft Casing
- 2 Screw - Lower Housing
- 3 Driveshaft
- 4 Screw - Lower to Upper Gear Housing
- 5 Cover - Snap On
- 6 Nut - Driveshaft Housing
- 7 Washer - Lock
- 8 Tube - Water
- 9 Housing - Lower, Driveshaft

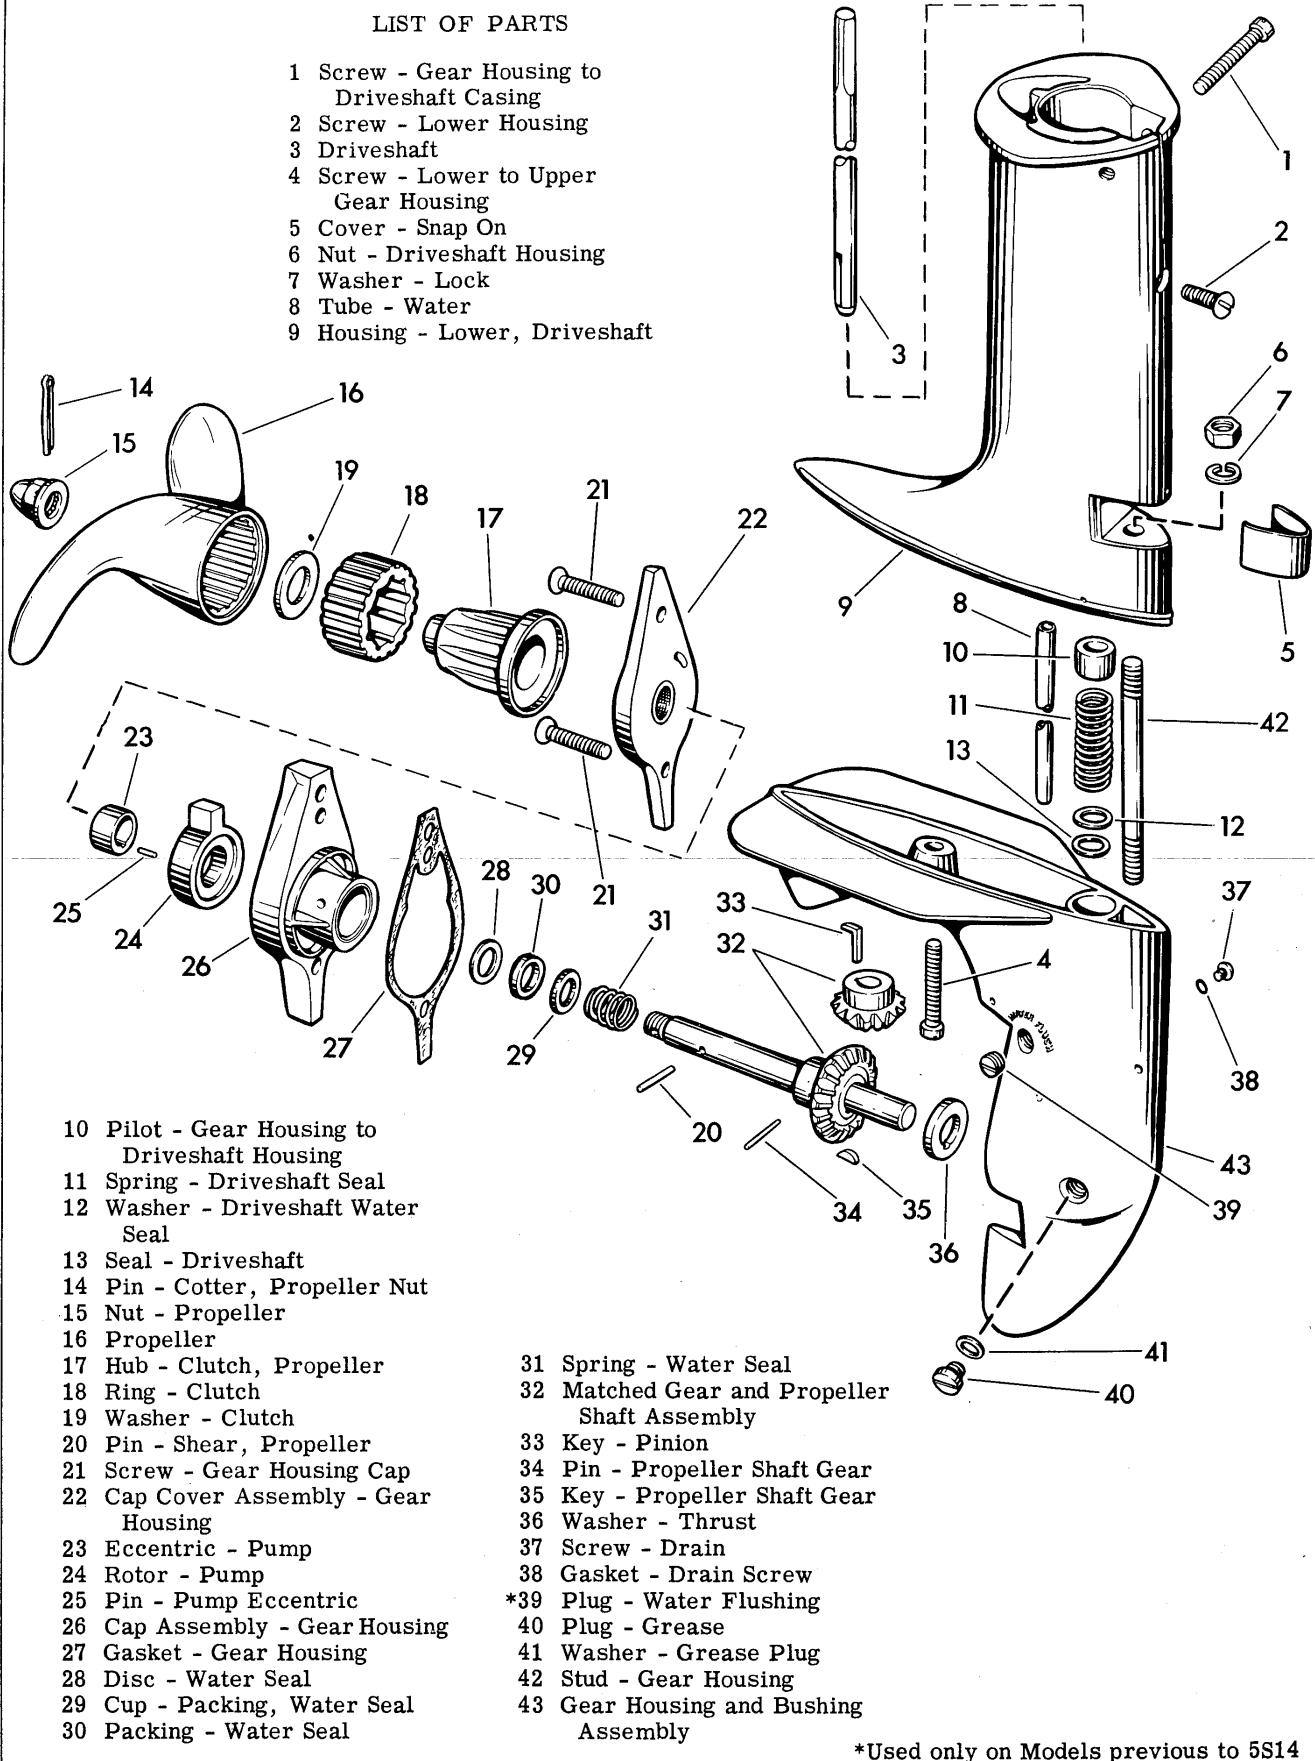

- 10 Pilot - Gear Housing to Driveshaft Housing
- 11 Spring - Driveshaft Seal
- 12 Washer - Driveshaft Water Seal
- 13 Seal - Driveshaft
- 14 Pin - Cotter, Propeller Nut
- 15 Nut - Propeller
- 16 Propeller
- 17 Hub - Clutch, Propeller
- 18 Ring - Clutch
- 19 Washer - Clutch
- 20 Pin - Shear, Propeller
- 21 Screw - Gear Housing Cap
- 22 Cap Cover Assembly - Gear Housing
- 23 Eccentric - Pump
- 24 Rotor - Pump
- 25 Pin - Pump Eccentric
- 26 Cap Assembly - Gear Housing
- 27 Gasket - Gear Housing
- 28 Disc - Water Seal
- 29 Cup - Packing, Water Seal
- 30 Packing - Water Seal

- 31 Spring - Water Seal
- 32 Matched Gear and Propeller Shaft Assembly
- 33 Key - Pinion
- 34 Pin - Propeller Shaft Gear
- 35 Key - Propeller Shaft Gear
- 36 Washer - Thrust
- 37 Screw - Drain
- 38 Gasket - Drain Screw
- *39 Plug - Water Flushing
- 40 Plug - Grease
- 41 Washer - Grease Plug
- 42 Stud - Gear Housing
- 43 Gear Housing and Bushing Assembly

*Used only on Models previous to 5S14