

Johnson motors

**parts
catalog**

1956


MODELS

RD-RDL-18, 18E & 18C

30 hp

W A U K E G A N , I L L I N O I S

PART NO. 376750

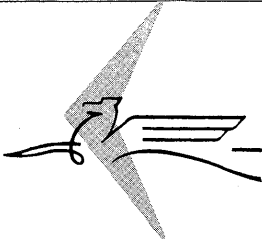

J O H N S O N M O T O R S

NOTE

PARTS THAT DIFFER IN MODELS RD-18, RD-18E &
RD-18C MOTORS, ARE IDENTIFIED BY MODEL NUMBERS

WARRANTY

We warrant each new outboard motor of our manufacture to be free from defects in material and workmanship under normal use and service, our obligation under this warranty being limited to making good at the factory any part or parts thereof which shall, within three months after initial use, or within one year from date of original purchase, whichever first occurs, be returned to us with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties and representations expressed or implied and of all other liabilities in connection with the sale or use of any motors.


This warranty shall not apply to any motor which shall have been repaired or altered outside the factory in any way so as to affect its stability, nor which has been subject to misuse, negligence or accident, or operated for racing purposes or operated in any other way than in accordance with our operating instructions.

We make no warranty in respect to trade accessories not of our manufacture, inasmuch as they are usually warranted separately by their respective manufacturers.



Because of the unusual strains and accidents to which such products may be subjected, we make no warranty of either material or workmanship in racing outboard motors or any of our products when used for racing.

Claims must be entered on motors or motor parts returned to the factory for inspection, repair or replacement. Request form No. SE-16 from local Johnson Dealer or Service Station. **This form should be filled in, signed by the motor owner and dealer or service station representatives and mailed to the factory with returned material. TRANSPORTATION CHARGES PREPAID.**

SHROUD GROUP

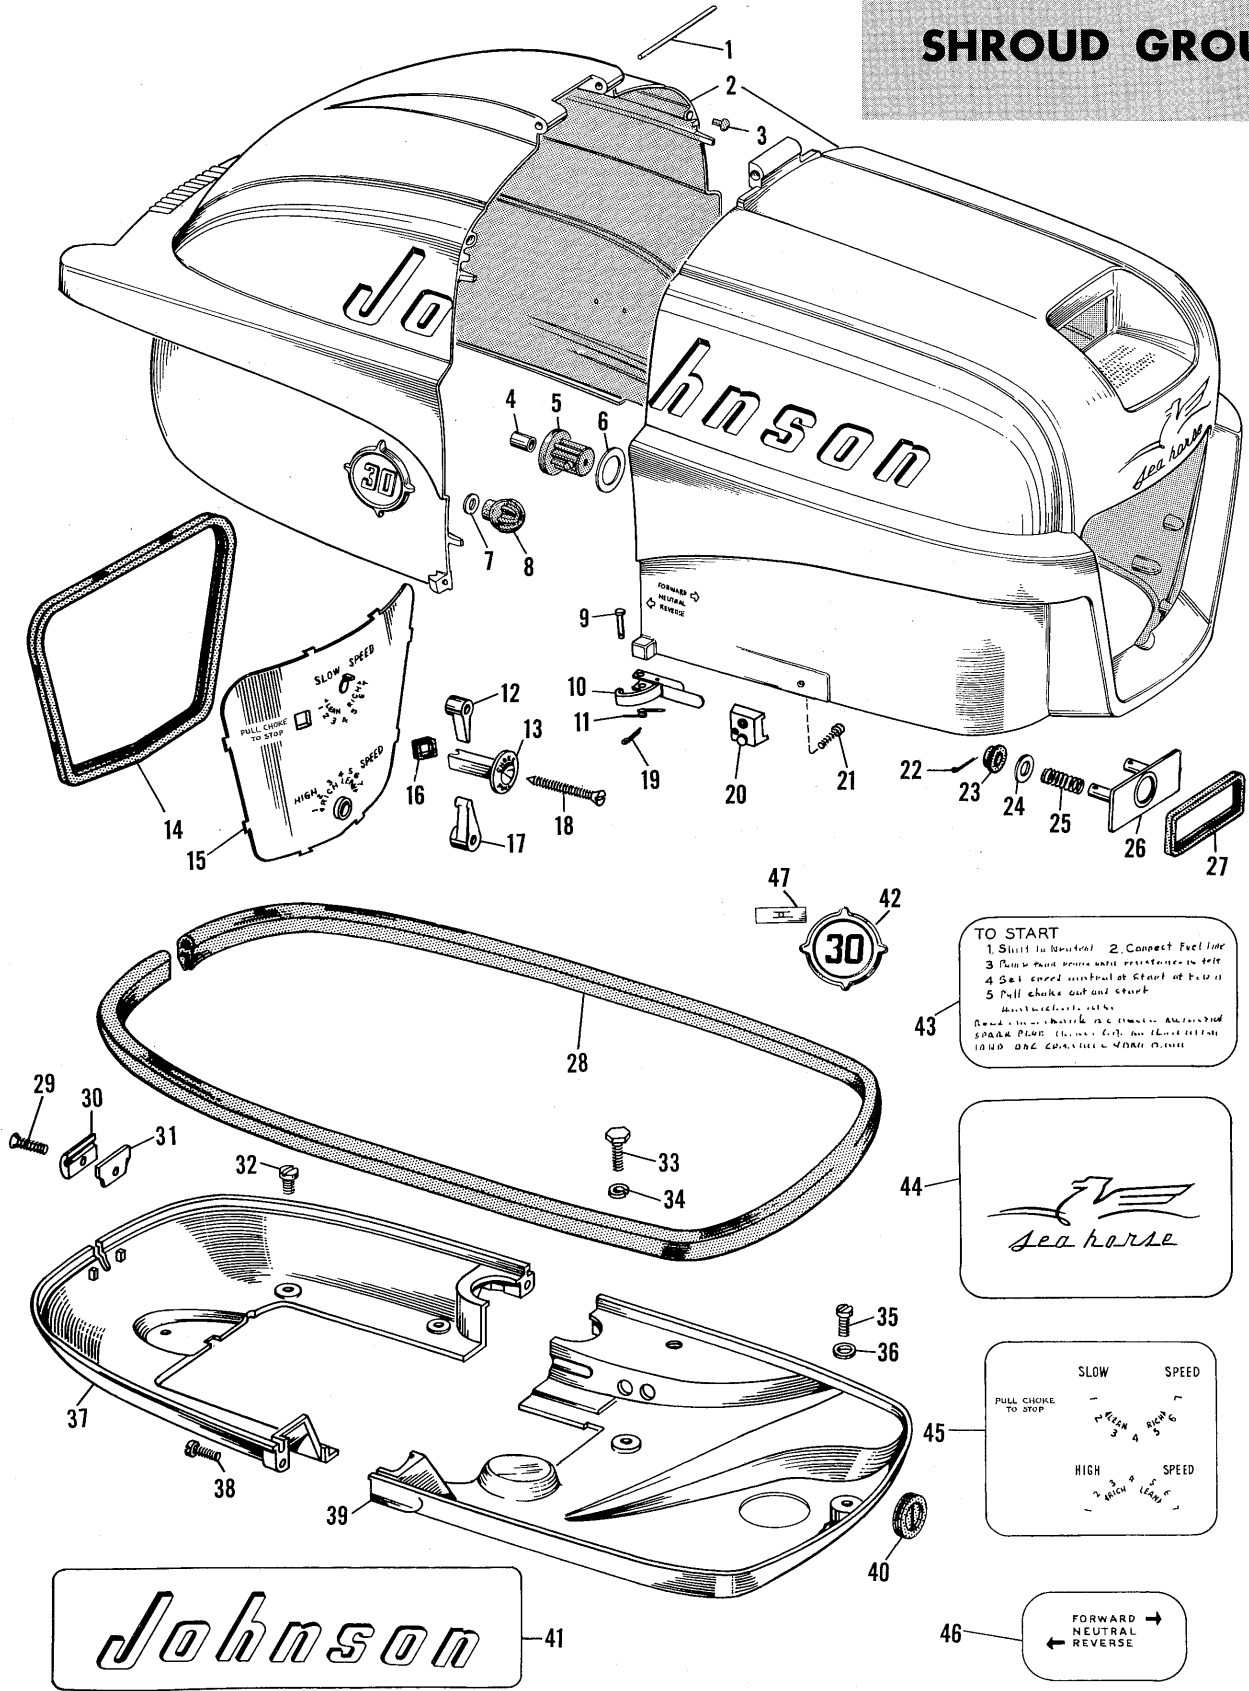

TO START
 1. Shift to Neutral 2. Connect Fuel Line
 3. Pump fuel down into resistance to choke
 4. Set speed control at start of full throttle
 5. Pull choke out and start

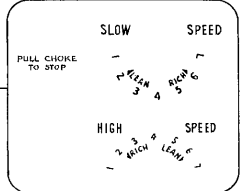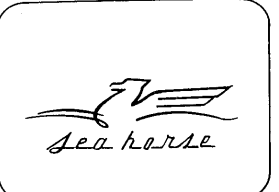


RD-RDL-18, 18E & 18C


BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	303984	Hinge Pin	1
2	376642	Shroud & Transfer Assembly	1
3	203290	Bumper	2
4	303959	Sleeve	2
5	303958	Bumper	2
6	303960	Washer	2
7	303886	Washer	2
8	304461	Bumper	2
9	303522	Pin	2
10	376129	Clamp & Lever Assembly	2
11	303519	Spring	2
12	303847	Adjusting Lever - Slow Speed	1
13	303718	Choke Knob	1
14	303983	Grommet	1
15	376517	Control Panel & Transfer	1
16	303796	Grommet	1
17	304360	Adjusting Lever - High Speed	1
18	302761	Screw	1
19	303590	Cotter Pin	3
20	303985	Boss	1
21	19-189	Screw	1
22	41-163	Cotter Pin	4
23	303535	Grommet	2
24	202065	Washer	2
25	303518	Spring	2
26	303528	Cover	1
27	303529	Grommet	1
28	304018	Seal	1
29	304022	Screw	1
30	304021	Clamp - Outer	1
31	304020	Clamp - Inner	1
32	39-176	Screw	8
33	304027	Screw	1
34	303480	Washer	1
35	300258	Screw	2
36	43-302	Washer	3
37	304460	Motor Cover - Lower Rear	1
38	303714	Screw	2
39	304028	Motor Cover - Lower Front	1
40	304292	Grommet	1
41	304332	Transfer - Johnson - Port & Star	2
42	304386	Medallion - "30"	2
43	304367	Transfer - Starting Instructions	1
44	304339	Transfer - Sea-Horse - Front	1
45	304311	Transfer - Control Panel	1
46	304349	Transfer - Gear Shift	1
47	304387	Speed Nut	4

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

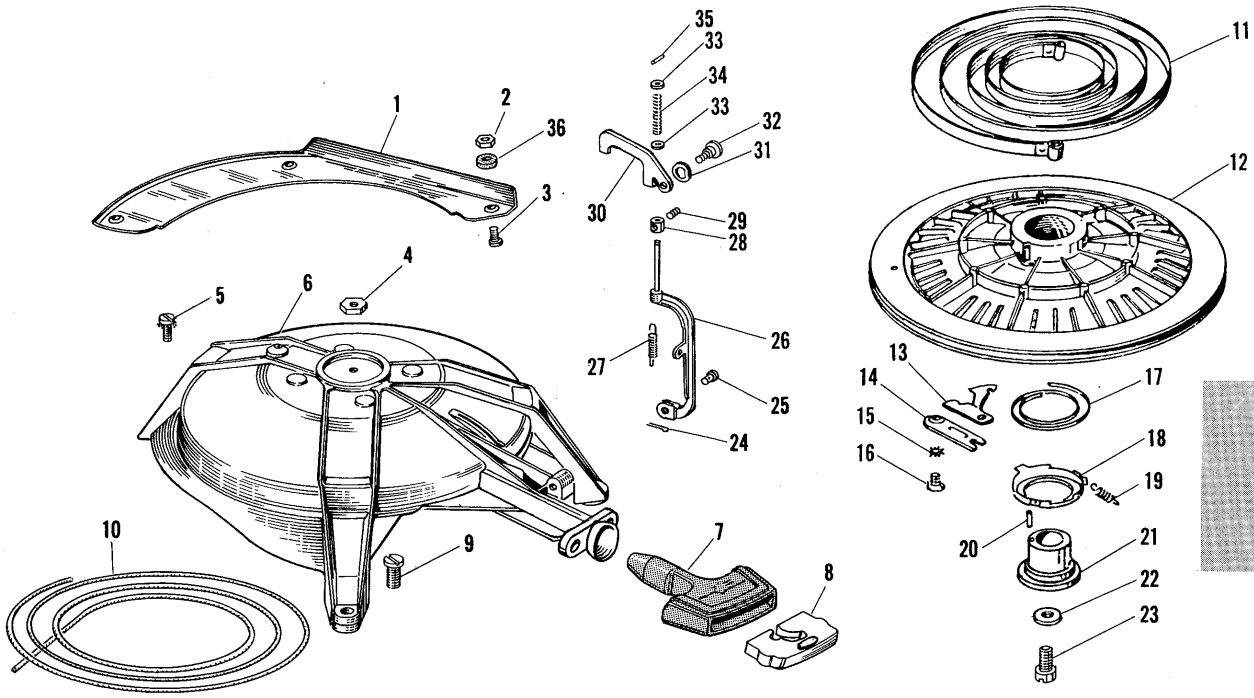

STARTER GROUP

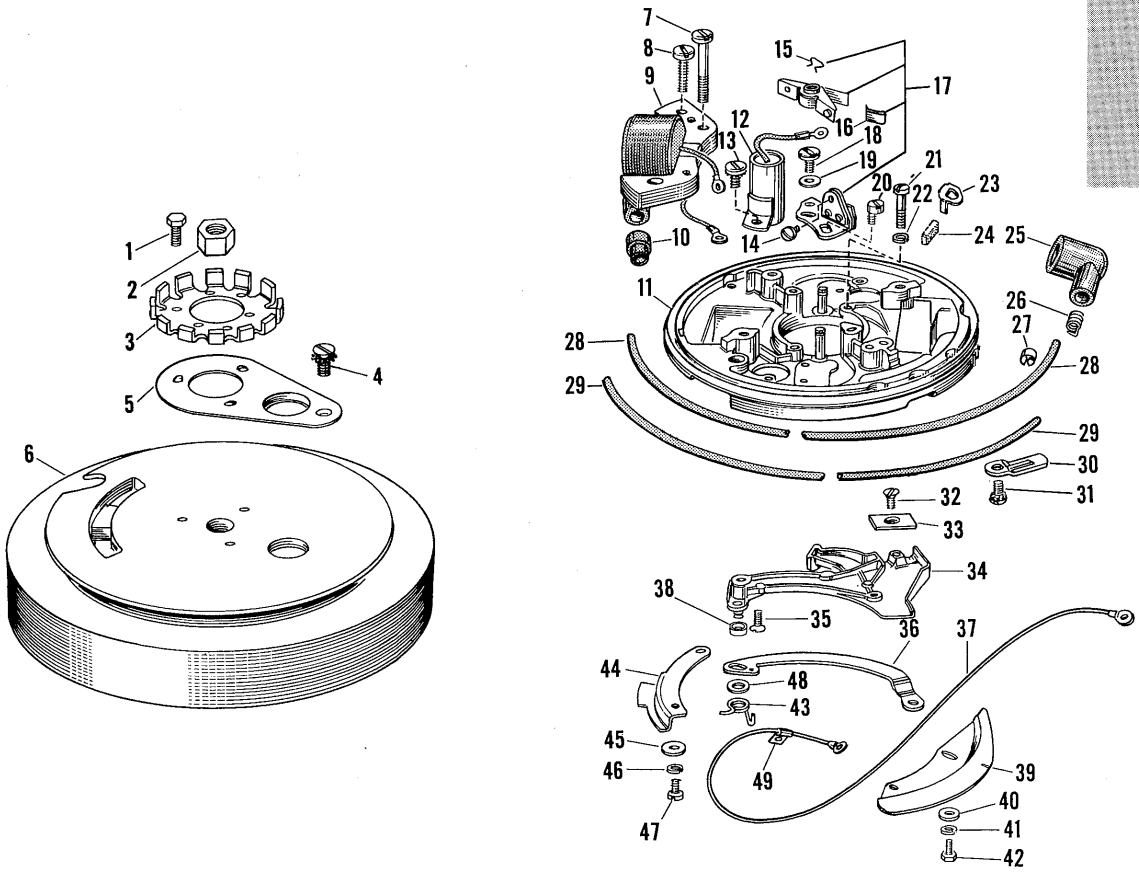

MAGNETO GROUP

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS



PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	303703	Guard	1
2	71-1102	Nut	3
3	302104	Screw	9
4	302103	Nut	1
5	303766	Screw	1
6	376662	Starter Housing & Pin Assembly	1
	(376663 Starter Assembly Complete)		1
7	304361	Handle (Model RD-18)	1
	304501	Handle (Models RD-18E & 18C)	1
8	304325	Anchor	1
9	303591	Screw	2
10	304096	Starter Rope	1
11	375836	Starter Spring	1
12	376647	Starter Pulley	1
13	202470	Starter Pawl	3
14	202317	Retainer	3
15	71-1026	Lockwasher	3
16	302104	Screw	9
17	302222	Friction Spring	1

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
18	202114	Equalizer Cup	1
19	202155	Spring	3
20	202156	Pin	1
21	276643	Spindle & Pin Assembly	1
22	202356	Washer	1
23	51-223	Screw	1
24	303590	Cotter Pin	3
25	303742	Pin	1
26	376238	Link & Rod Assembly	1
27	304224	Spring	1
28	303244	Collar	1
29	303245	Allen Screw	1
30	304210	Locking Lever	1
31	302473	Bow Washer	1
32	303247	Screw	1
33	71-1447	Washer	2
34	303051	Spring	1
35	41-110	Pin	6
36	304510	Washer	3

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	302468	Screw	3
2	71-1331	Nut	1
3	202111	Ratchet	1
4	510293	Screw - Sems	1
5	510292	Cover	1
6	580212	Flywheel Assembly	1
7	510286	Screw	2
8	510195	Screw	4
9	580197	Coil & Lamination Assembly	2
10	510289	Grommet	2
11	580211	Armature Plate, Sleeve & Post Assembly	1
	(580199 Armature Plate Assembly Complete)		1
12	510173	Condenser	2
13	510193	Screw	6
14	510194	Screw	2
15	71-1052	Clip	2
16	510204	Clip	2
17	580148	Breaker Assembly	2
18	510278	Screw	4
19	510208	Bow Washer	2
20	510185	Eccentric Screw	2
21	510192	Screw	2
22	3-28	Lockwasher	2
23	510188	Oiler Clip	1
24	510189	Oiler Wick	1
25	510232	Cover	2
26	510231	Terminal	2
27	71-1239	Marker - High Tension Lead - Upper	1

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
28	510203	High Tension Lead - Upper	1
	(580135 High Tension Lead Assembly - Upper)		1
29	510210	High Tension Lead - Lower	1
	(580146 High Tension Lead Assembly - Lower)		1
30	510190	Clamp	1
31	510193	Screw	6
32	302751	Screw	1
33	303741	Clamp	1
34	376467	Anchor & Pin Assembly	1
35	302104	Screw	9
36	304219	Link	1
37	580208	Lead Assembly Cutout	1
38	304352	Sleeve	1
39	304227	Throttle Cam	1
40	71-1531	Washer	4
41	71-1487	Lockwasher	5
42	304441	Screw	2
43	304656	Spring	1
44	304228	Stop	1
45	91-423	Washer	1
46	71-1487	Lockwasher	5
47	302812	Screw	1
48	85-54	Washer	1
49	510267	Bracket	1

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

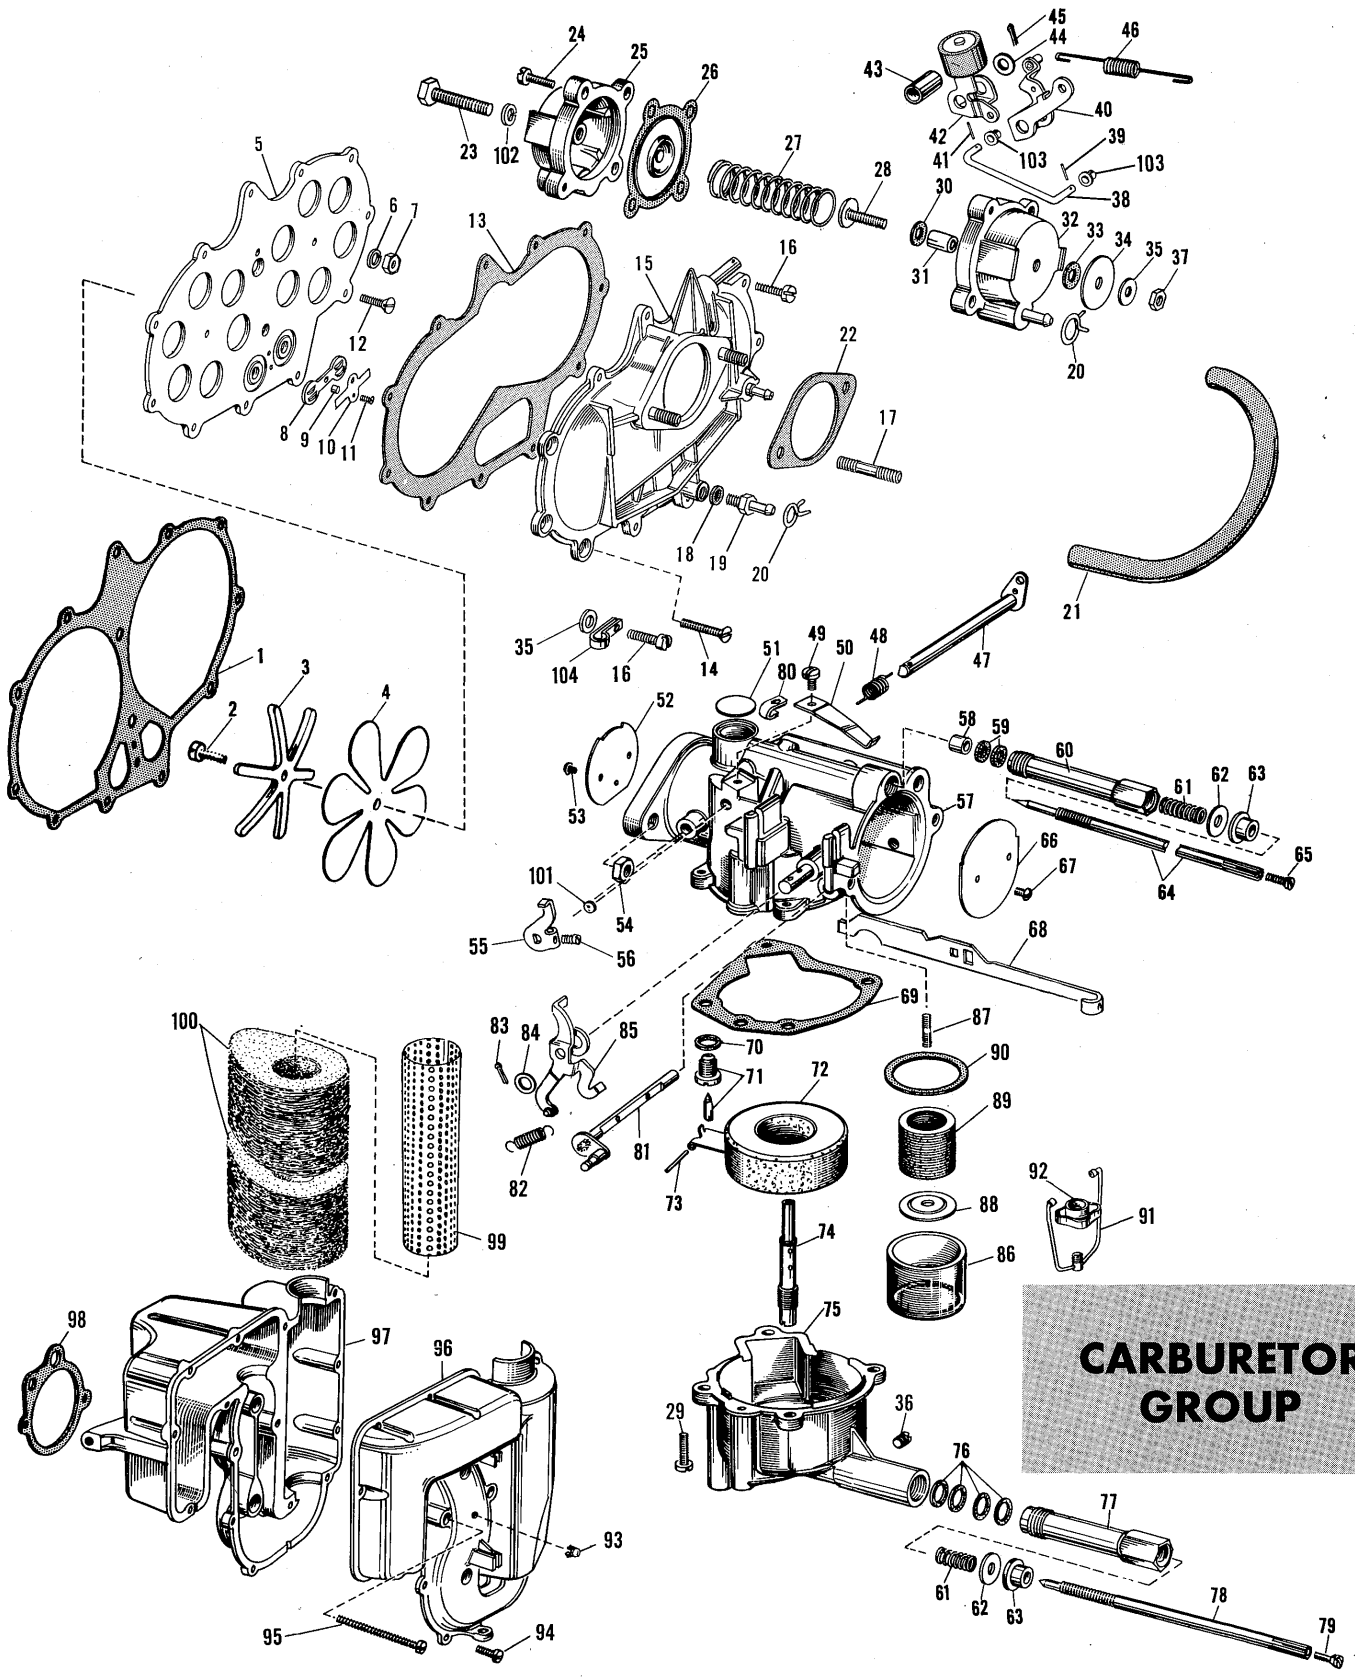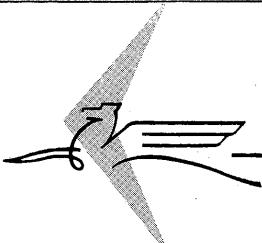


CARBURETOR GROUP

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS


PHOTO NO.	PART NO.	NAME OF PART	QTY. PER. MOTOR	PHOTO NO.	PART NO.	NAME OF PART	QTY. PER. MOTOR
1	304262	Gasket	1	57	376686	Carburetor Body, Valve & Plug Assembly	1
2	301858	Screw	2			(376474 Carburetor Assembly Complete)	1
3	303732	Leaf Stop	2	58	303939	Bushing	1
4	303731	Leaf Valve	2	59	43-123	Packing	6
5	304234	Leaf Plate	1	60	303982	Nut - Slow Speed Needle Valve	1
	(376488	Leaf Plate Assembly)	1	61	304142	Spring	2
6	71-1487	Lockwasher	5	62	202065	Washer	2
7	85-64	Nut	2	63	303535	Grommet	2
8	302042	Check Valve	1	64	303966	Needle Valve - Slow Speed	1
9	302046	Spacer	2	65	551517	Screw	2
10	302048	Spring	1	66	302674	Choke Valve	1
11	19-191	Screw	2	67	303760	Screw	4
12	302104	Screw	9	68	303963	Choke Rod	1
13	304261	Gasket	1	69	303750	Gasket	1
14	200399	Screw	2	70	301996	Washer	1
15	376487	Intake Manifold & Stud Assembly	1	71	375798	Float Valve & Seat Assembly	1
16	43-110	Screw	22	72	375792	Float & Arm Assembly	1
17	302822	Stud	2	73	302661	Hinge Pin	1
18	301819	Washer	1	74	304212	Nozzle	1
19	301820	Nipple	1	75	304032	Float Chamber	1
20	302647	Clamp	6	76	43-123	Packing	6
21	203286	Hose	1	77	303981	Nut-High Speed Needle Valve	1
22	302598	Gasket	1	78	303965	Needle Valve-High Speed	1
23	302479	Screw	1	79	551517	Screw	2
24	13-558	Screw	9	80	302792	Spring	1
25	304179	Body	1	81	376256	Choke Shaft, Arm & Pin Assembly	1
26	376611	Diaphragm & Plate Assembly	1	82	304111	Spring	1
27	304499	Spring	1	83	41-163	Cotter Pin	3
28	304482	Screw	1	84	85-54	Washer	1
29	13-558	Screw	7	85	376258	Bellcrank & Pin Assembly	1
30	304183	Washer	1	86	303967	Bowl	1
31	303893	Tubing	1	87	304522	Stud	1
32	376443	Body & Nipple (376646 Cutout Switch Assembly)	1	88	304523	Nut	1
33	304183	Washer	1	89	302062	Filter	1
34	303723	Washer	1	90	302675	Gasket	1
35	71-1531	Washer	4	91	376327	Yoke & Screw Assembly	1
36	303041	Screw	1	92	375989	Thumb Nut & Swivel Cup Assembly	1
37	130450	Nut	3	93	203652	Button Plug	1
38	304208	Link	1	94	25-74	Screw	13
39	41-110	Pin	6	95	303994	Screw	2
40	376478	Throttle Lever & Pin	1	96	*203916	Air Silencer - Front (Models RD-18E & 18C)	1
41	41-110	Pin	6	97	*203917	Air Silencer - Rear (Models RD-18E & 18C)	1
42	376477	Cam Follower	1	98	303988	Gasket	1
43	303310	Spacer	1	99	203581	Insert Tube	1
44	301827	Washer	1	100	203582	Acoustical Liner	2
45	41-163	Cotter Pin	3	101	303962	Core Plug	1
46	303296	Spring	1	102	304202	Lockwasher	1
47	376473	Throttle Shaft & Arm Assembly	1	103	304216	Bushing	2
48	302696	Spring	1	104	510267	Bracket	1
49	43-156	Screw	1				
50	302722	Spring	1				
51	19-51	Core Plug	1				
52	304056	Throttle Valve	1				
53	303760	Screw	4				
54	7-46	Nut	4				
55	376727	Lever & Screw Assembly	1				
56	131249	Screw	1				

*Order Part No. 277584 Air Silencer Assembly (Model RD-18)

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

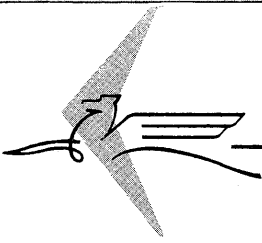

**POWER
HEAD
GROUP**

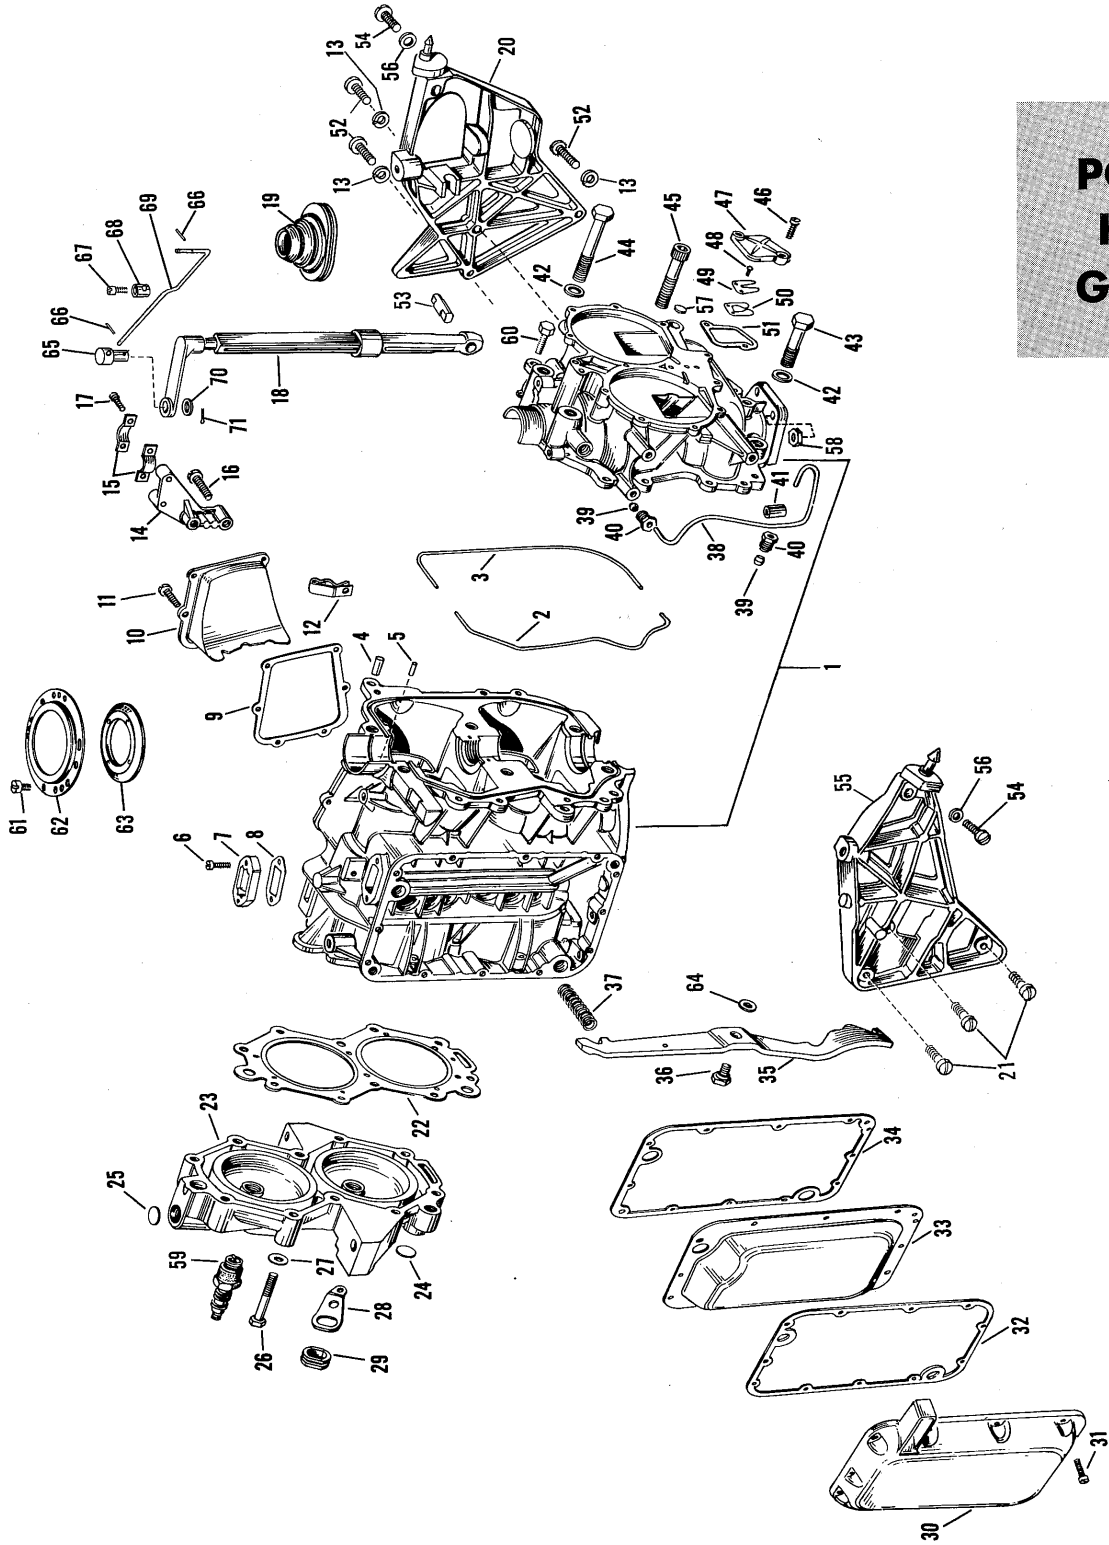

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER OF MOTOR WHEN ORDERING PARTS


PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	376457	Cylinder & Crank-case	1
2	302621	Seal-Starboard	1
3	302622	Seal-Port	1
4	300402	Tapered Pin	2
5	304178	Dowel	3
6	13-558	Screw	9
7	302582	Cover	1
8	302581	Gasket	1
9	302586	Gasket	2
10	304200	Cover	2
11	43-259	Screw	12
12	304693	Clamp	1
13	51-137	Lockwasher	3
14	304197	Bracket	1
15	303109	Bearing Clamp	2
16	25-238	Screw	2
17	302948	Screw	2
18	304198	Lever	1
19	304019	Grommet	1
20	376643	Bracket & Pin Assembly - Port	1
21	551706	Screw	3
22	302583	Gasket	1
23	277419	Cylinder Head	1
24	13-426	Core Plug - Lower	1
25	19-51	Core Plug - Upper	1
26	303782	Screw	10
27	304670	Washer	9
28	300455	Anchor	1
29	300454	Grommet	1
30	302550	Cover	1
31	43-110	Screw	22
32	302607	Gasket	2
33	302549	Cover	1
34	302607	Gasket	2
35	303970	Shifter Lock	1
36	302592	Screw	1
37	302587	Spring	1

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
38	375862	Oil Line	1
39	11-61	Gland	2
40	41-105	Packing Nut	2
41	302811	Spacer	1
42	300343	Washer	4
43	302600	Screw	2
44	301431	Screw	2
45	302579	Screw	2
46	43-110	Screw	7
47	302033	Cover	1
48	303761	Screw	2
49	304655	Plate	1
50	302031	Leaf Plate	1
51	302032	Gasket	1
52	21-358	Screw	3
53	304155	Pin	1
54	132679	Screw	9
55	376299	Bracket & Pin Assembly - Star	1
56	43-302	Washer	3
57	300788	Expansion Plug	1
58	7-46	Nut	4
59	*200322	Spark Plug Champion J6J	2
59	*376290	Spark Plug - Auto Lite A3X	2
60	300646	Screw	9
61	304442	Screw	4
62	303278	Support	1
63	303277	Retaining Ring	1
64	304051	Washer	1
65	304226	Pivot Pin	1
66	41-110	Pin	6
67	304221	Screw	1
68	304222	Collar	1
69	304225	Rod	1
70	551953	Washer	1
71	303049	Cotter Pin	1


*We recommend either Champion or Auto Lite Spark Plugs.

NOTE
Power Head Gasket Set (less Cyl. Head Gasket)
Part No. 376502

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

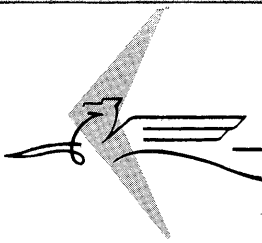

CRANKSHAFT, PISTON AND CONNECTING ROD GROUP

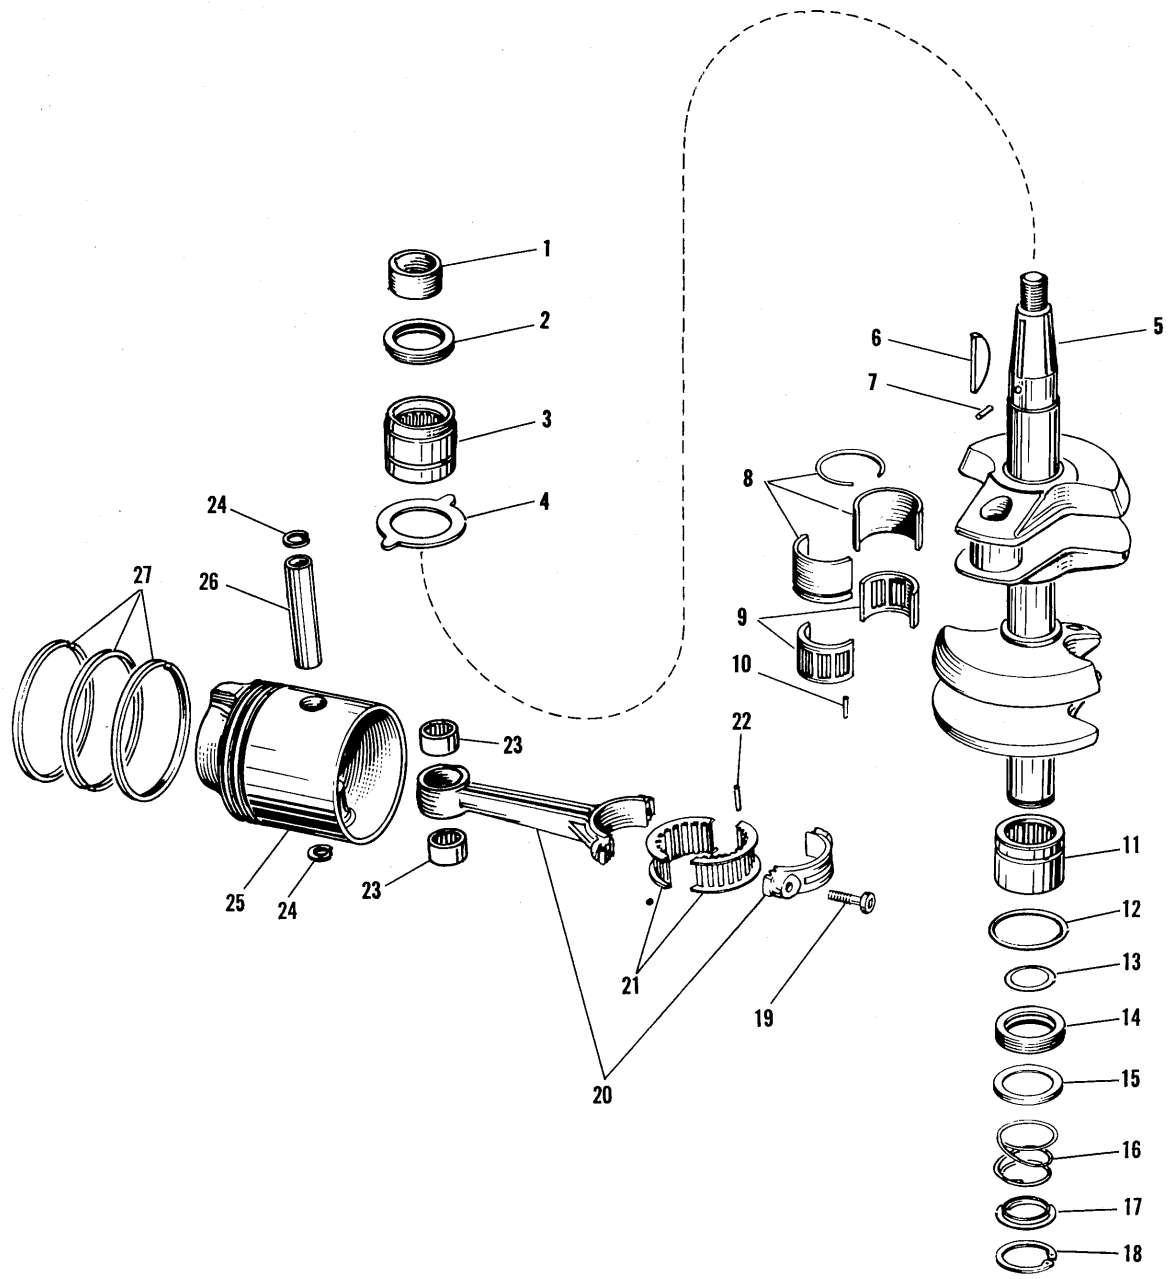


BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	510169	Cam	1
2	303804	Seal	1
3	376433	Roller Bearing & Seal Assembly - Upper	1
4	304550	Thrust Washer (Models RD-18 & 18E)	1
	304697	Thrust Washer (Model RD-18C)	1
5	203655	Crankshaft	1
6	302602	Key	1
7	302578	Pin	1
8	302585	Split Sleeve	1
9	302755	Bearing Cage	1
10	302584	Needle Bearing	18
11	*375763	Roller Bearing Assembly - Lower	1
12	302537	O-Ring	1
13	302540	O-Ring	1
14	302538	Seal	1
15	302594	Retaining Washer	1
16	302539	Spring	1
17	303801	Retaining Washer	1
18	302536	Retaining Ring	1
19	202967	Screw	4
20	376566	Connecting Rod & Wrist Pin Bearings Assembly	2
21	302603	Retainer	2
22	302529	Needle Bearing	4
23	304322	Needle Bearing	4
24	302577	Spring Ring	4
25	376794	Piston & Dowel Pin	2
	(376795	Piston & Connecting Rod Assembly with Rings)	2
26	304319	Wrist Pin	2
27	302533	Piston Ring	6

*Model RD & RDL-18 Motors Order Part No. 376680 Lower Journal Bearing, Seal, Spring & Washer Assembly.

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

**LOWER UNIT AND
STEERING HANDLE GROUP**

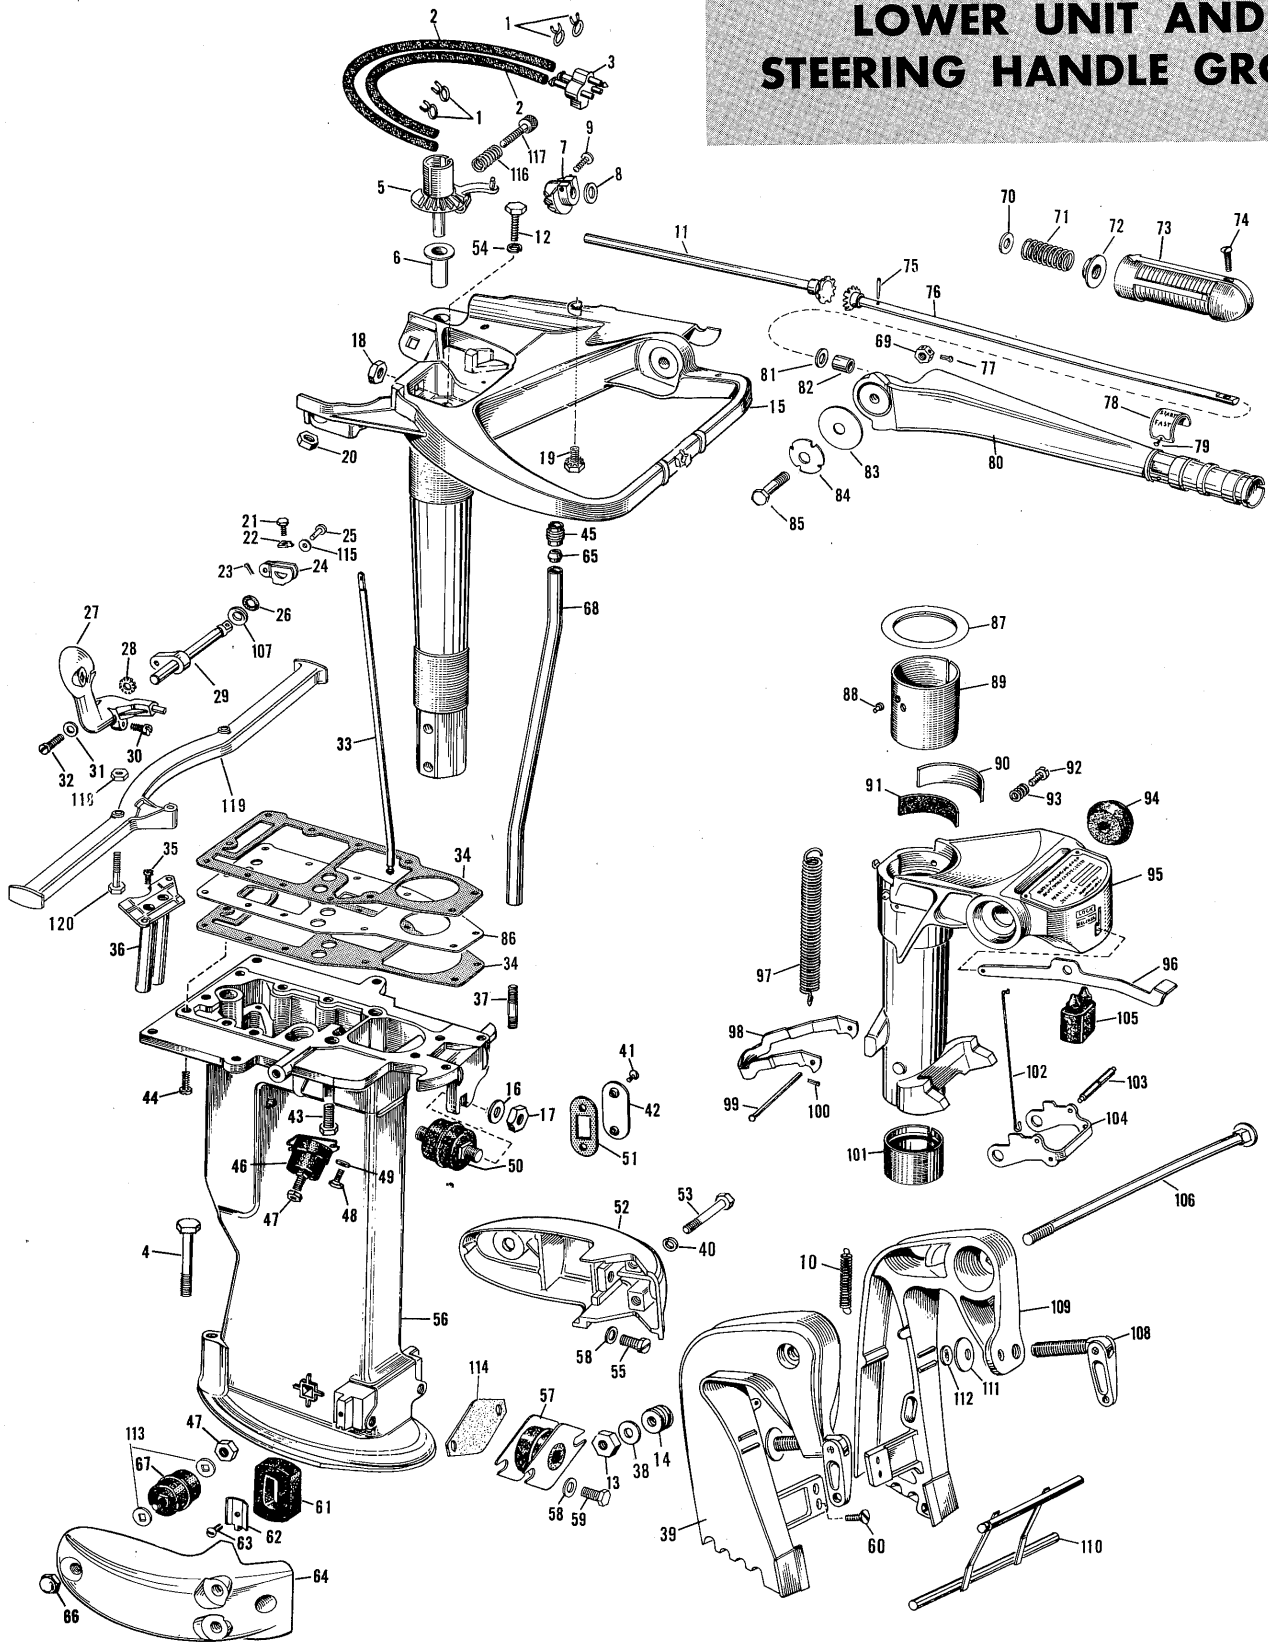

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS


PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	302647	Clamp	4
2	304029	Hose	2
3	375788	Body Assembly	1
4	302871	Screw	1
5	376730 304574	Gear (Model RD-18) Gear (Models RD-18E & 18C)	1
6	303854	Bushing	1
7	303142	Pinion	1
8	303107	Washer	1
9	303951	Screw	1
10	302736	Spring	1
11	376296 376694	Gear & Shaft Assembly - Short (Model RD-18) Gear & Shaft Assembly - Short (Models RD-18E & 18C)	1
12	304151	Screw	4
13	17-182	Nut	1
14	302051	Spring	1
15	376740	Steering Bracket, Pilot Shaft & Dowel Pin	1
16	303913	Washer	2
17	303912	Nut	2
18	303912	Nut	2
19	303311	Screw	1
20	303889	Nut	2
21	303722	Screw	1
22	303721	Clip	1
23	15-268	Cotter Pin	3
24	304379	Lever	1
25	304377	Pin	1
26	303191	O-Ring	1
27	375766	Shift Lever	1
28	51-137	Lockwasher	1
29	376287	Bracket & Shaft Assembly	1
30	300258	Screw	2
31	21-165	Washer	1
32	300646	Screw	9
33	303870	Shift Rod-Upper	1
34	304545	Gasket	2
35	303393	Screw	4
36	376786	Exhaust Loading Tube Assembly	1
37	304517	Stud	2
38	25-196	Washer	1
39	376439	Stern Bracket & Clamp Screw Assembly-Star	1
40	302865	Lockwasher	2
41	302509	Screw	2
42	303862	Cover Plate	1
43	300355	Screw	2
44	132679	Screw	9
45	302894	Gland Nut	1
46	303879	Rubber Mount	2
47	303890	Acorn Nut	2
48	39-176	Screw	8
49	303887	Washer	4
50	303882	Rubber Mount	1
51	304023	Gasket	1
52	304446	Housing - Port	1
53	304452	Screw	2
54	19-124	Lockwasher	4
55	303883	Screw	2
56	376802	Exhaust Housing, Water Tube & Stud Assembly	1
57	303881	Rubber Mount	1
58	303886	Washer	6
59	303888	Screw	2
60	11-185	Screw	2
61	303918	Bumper	2
62	303961	Retainer	2

PHOTO NO.	PART NO.	NAME OF PART	QTY PER MOTOR
63	303393	Screw	4
64	304447	Housing - Star	1
65	7-170	Gland	1
66	303890	Acorn Nut	2
67	303880	Rubber Mount	2
68	304680	Water Tube	1
69	302803	Nut	1
70	303252	Washer	1
71	301656	Spring	1
72	303282	Friction Block	1
73	303213	Grip	1
74	302710	Screw	1
75	302709	Groove Pin	1
76	376414 376693	Gear & Shaft Assembly - Long (Model RD-18) Gear & Shaft Assembly - Long (Models RD-18E & 18C)	1
77	302804	Cotter Pin	1
78	304218	Plate	1
79	301992	Stud	5
80	376354	Steering Handle	1
81	302712	Washer	1
82	302717	Bushing	1
83	302703	Thrust Washer	1
84	302631	Spring Washer	1
85	302721	Screw	1
86	304540	Baffle Plate	1
87	303867	Thrust Washer	1
88	303696	Pin	1
89	303936	Liner	1
90	303928	Plate	1
91	303929	Spacer	1
92	41-178	Screw	1
93	551113	Spring	1
94	302637	Conical Washer	2
95	303885	Swivel Bracket	1
96	303863	Arm	1
97	303971	Spring	1
98	303954	Locking Lever	1
99	303955	Rod	1
100	15-268	Cotter Pin	3
101	303868	Liner	1
102	303957	Link	1
103	303956	Shaft	1
104	303953	Link	1
105	303933	Bumper	1
106	302643	Bolt	1
107	303775	Washer	1
108	375747	Clampscrew & Handle Assembly	2
109	376438	Stern Bracket & Clampscrew Assembly - Port	1
110	376303	Tilting Lever Assembly	1
111	41-48	Swivel Plate	2
112	302420	Retainer	2
113	304168	Gasket	4
114	304169	Gasket	1
115	304380	Bow Washer	1
116	304865	Spring	1
117	376730 304573	Screw - Idle Stop (Model RD-18) Screw - Idle Stop (Models RD-18E & 18C)	1
118	15-254	Nut	2
119	304389	Carrying Handle	1
120	304392	Screw	3
MODEL RDL-18, 18E & 18C PARTS THAT DIFFER FROM MODEL RD-18, 18E & 18C			
4	304135	Screw (RDL)	1

See Page 17 for additional Model RDL-18, 18E & 18C parts

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

GEARCASE ASSEMBLY GROUP


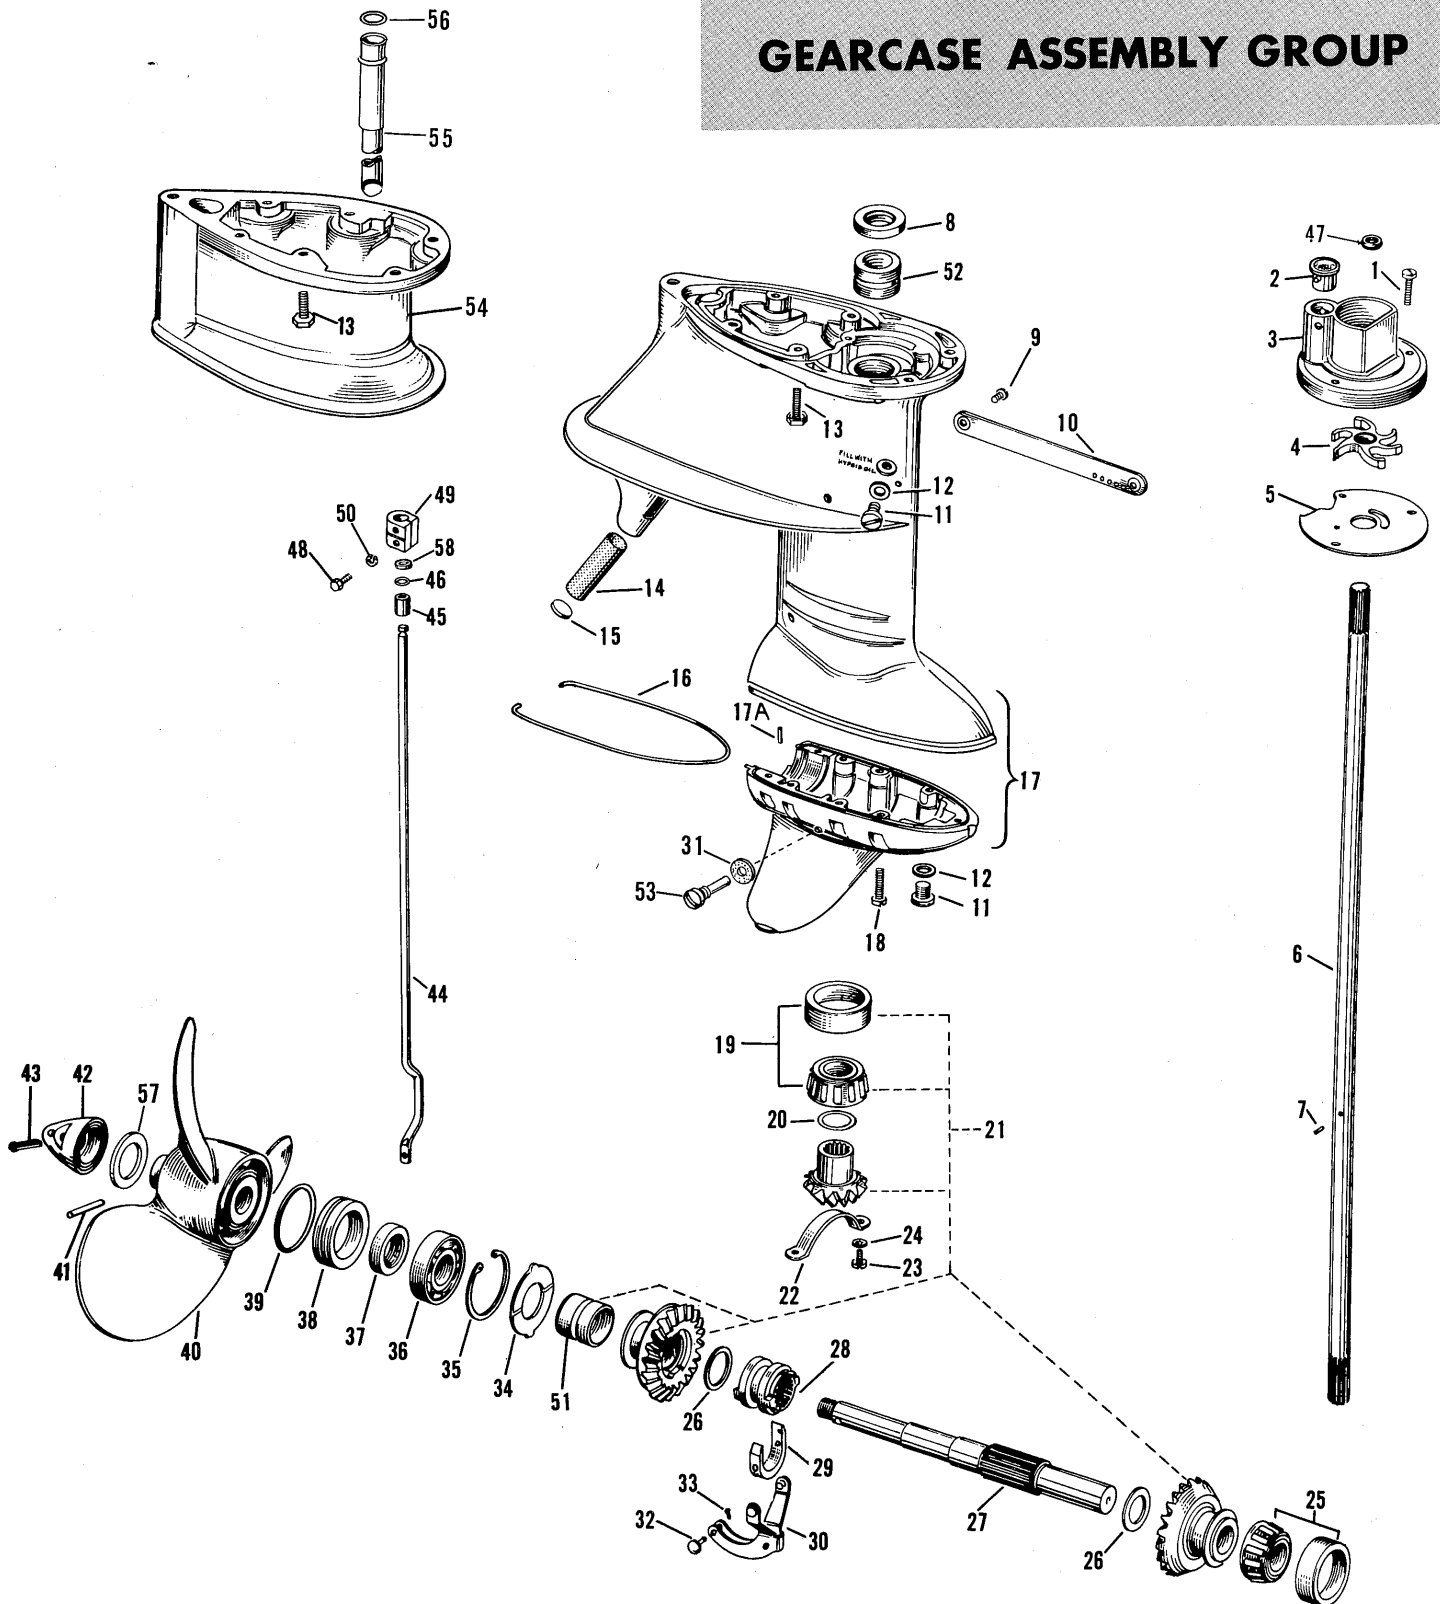


BE SURE TO SPECIFY MODEL AND SERIAL NUMBER OF MOTOR WHEN ORDERING PARTS


PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR	PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	302677	Screw	3	33	15-268	Cotter Pin	3
2	304026	Grommet	1	34	302743	Thrust Washer	1
3	303831	Impeller Housing	1	35	302528	Retaining Ring	1
4	375808	Impeller	1	36	20-52	Ball Bearing	1
5	303866	Plate	1	37	302564	Oil Retainer	1
6	303871	Driveshaft	1	38	303050	Housing	1
7	300771	Pin	1	39	302588	O-ring	1
8	302545	Oil Retainer	1	40	376733	Propeller (Models RD-18 & 18E)	1
9	302509	Screw	2		376732	Propeller (Model RD-18C)	1
10	302616	Cover	1	41	302566	Drive Pin (Models RD-18 & 18E)	1
11	27-283	Screw	2		304575	Drive Pin (Model RD-18C)	1
12	27-284	Washer	2	42	375773	Propeller Nut (Models RD-18 & 18E)	1
13	302510	Screw	6		376731	Propeller Nut (Model RD-18C)	1
14	302521	Screen	1	43	19-84	Cotter Pin	3
15	300077	Plug	1	44	303869	Shift Rod - Lower	1
16	302604	Seal	1	45	301878	Bushing (Models RD-18 & 18E)	1
17	376409	Gearcase & Bearing (Models RD-18 & 18E)	1		304765	Bushing (Model RD-18C)	1
	376767	Gearcase & Bearing (Model RD-18C)	1	46	301877	O-Ring	1
17A	300611	Dowel Pin	1	47	303059	O-Ring	1
18	304070	Screw	9	48	304024	Screw	2
19	375829	Roller Bearing	1	49	303794	Connector	1
20	302796	Shim (.004)	As Required	50	301551	Lockwasher	2
20	302797	Shim (.008)	As Required	51	303690	Bushing	1
20	302798	Shim (.010)	As Required	52	304084	Bushing	1
20	302823	Shim (.006)	As Required	53	303358	Pivot Pin	1
21	375861	Gears & Pinion Bearing	1	57	304576	Washer (Model RD-18C)	1
22	302552	Support	1	58	304764	Gasket (Model RD-18C)	1
23	43-147	Screw (Model RD-18)	2	MODEL RDL-18, 18E & 18C PARTS THAT DIFFER FROM MODEL RD-18, 18E & 18C			
	303737	Screw (Models RD-18E & 18C)	2	6	304033	Driveshaft (RDL)	1
24	71-915	Lockwasher (Model RD-18)	2	13	302510	Screw (RDL)	6
25	375761	Roller Bearing	1	44	304034	Shift Rod - Lower (RDL)	1
26	302565	Thrust Washer	2	54	304030	Extension (RDL)	1
27	302522	Propeller Shaft	1	55	304175	Adapter (RDL)	1
28	375783	Shifter Clutch Dog	1	56	304174	Adapter O-Ring (RDL)	1
29	302650	Cradle	1				
30	375787	Shifter Lever and Pin	1				
31	304083	Washer	1				
32	302504	Pin	1				

See Page 15 for additional Model RDL-18, 18E & 18C parts

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

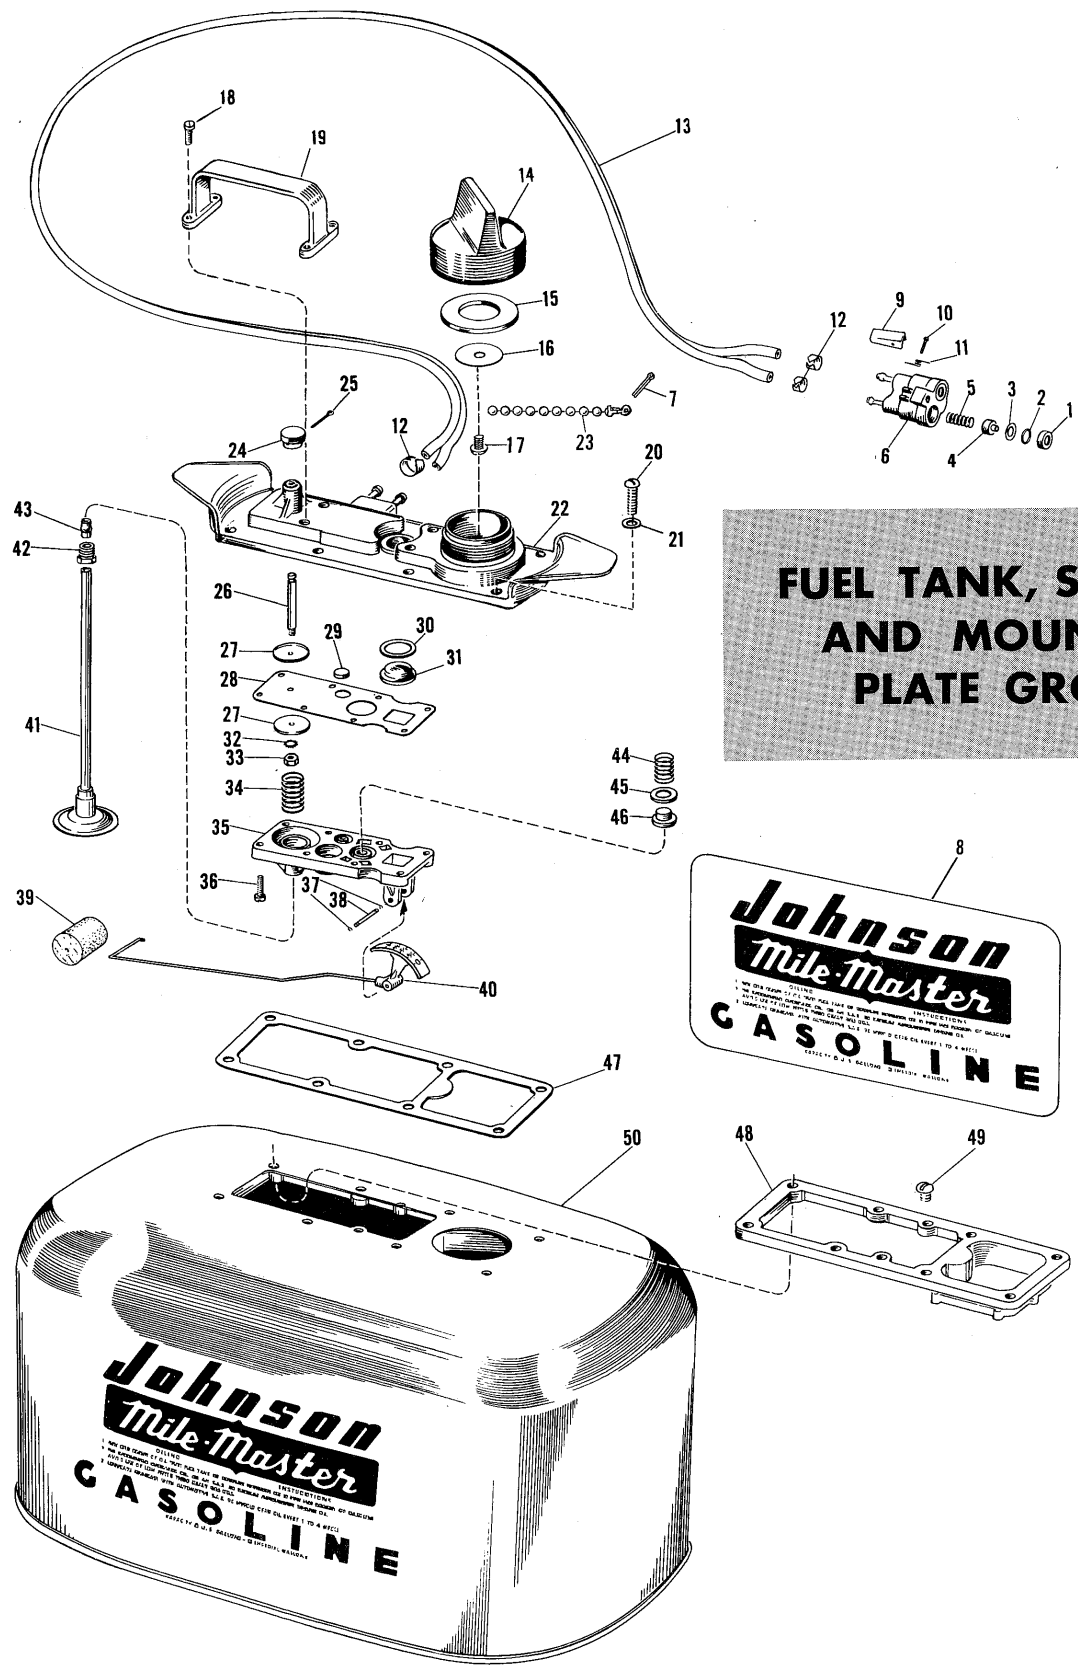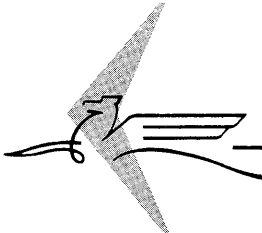

**FUEL TANK, SHROUD
AND MOUNTING
PLATE GROUP**

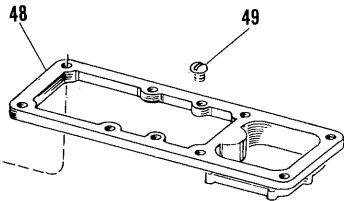

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS

RD-RDL-18, 18E & 18C

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	301828	Retainer	2
2	301824	O-Ring	2
3	301827	Washer	2
4	301826	Valve	2
5	301825	Spring	2
6	375587	Fuel Connector Assembly	1
7	15-213	Cotter Pin	1
8	304498	Transfer - Fuel Tank	1
9	301830	Lock	1
10	301832	Rivet	1
11	301829	Spring	1
12	301822	Hose Clamp	4
13	301821	Hose	1
14	375817	Filler Cap Assembly	1
15	301835	Gasket	1
16	302560	Plate	1
17	301837	Screw	1
18	13-558	Screw	14
19	302570	Handle	1
20	304137	Screw	8
21	301814	Gasket	8
22	376276	Housing	1
23	301838	Chain	1
24	301815	Push Button	1
25	17-186	Cotter Pin	1
26	302561	Push Rod	1
27	301800	Support	2
28	302563	Diaphragm	1
29	301802	Disc Valve	1
30	302571	Seal	1
31	302568	Glass	1
32	301736	Lockwasher	1
33	21-195	Nut	1
34	301803	Spring	1
35	302555	Housing	1
36	13-558	Screw	14
37	302654	Snap Ring	2
38	302653	Pin	1
39	302559	Float	1
40	375778	Indicator Assembly	1
41	375846	Foot Valve Assembly	1
42	132691	Nut	1
43	13-304	Gland	1
44	302135	Spring	1
45	302137	Washer	1
46	302136	Valve	1
47	302557	Gasket	1
48	302556	Support	1
49	53-85	Screw	2
50	375774	Fuel Tank (Only)	1
	(375777	Fuel Tank Assembly Complete)	

NOTE

Mile Master Tank Gasket Set
Part No. 376455

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER



JOHNSON MOTORS • WAUKEGAN, ILLINOIS • U.S.A.